



Onyx

Compact, eye-catching, contactless payment and telemetry device

Onyx User Manual

© Property of Nayax

All rights reserved

For more information contact www.livewellvending.co.uk

Table of Contents

General Information.....	3
Organization of the Manual	3
Device Overview.....	4
Device Summary.....	4
Device Specifications.....	5
Device Components	7
Device 2D Scheme.....	8
Device Cables.....	9
Device Connector Scheme (40-Pin).....	9
Additional Accessories (Included in Box)	10
Additional Accessories (Optional)	10
Getting Started	11
Installation.....	11
Device Dismantling.....	11
Operating and Testing.....	11
Configure Onyx Settings in NayaxVend.....	12
Technician Mode	13
Appendix 1 – Tests Prior to Repair.....	14
Safety and Handling Instructions	16
Environmental Guidelines	16
Warranty and Liability	16
Cleaning Instructions.....	16

General Information

This section explains the classification of the manual and the purpose for which it is intended.

Organization of the Manual

The user manual consists of six sections namely General Information, Device Overview, Getting Started, Appendix 1 – Tests Prior to Repair and Safety & Handling Instructions.

General Information section explains the purpose for which the manual is intended.

Device Overview section provides an overview of the device. The summary outlines the uses of the hardware and software requirements, device configuration, and device behavior in case of any contingencies.

Getting Started section explains the first steps to start using the device.

Appendix 1 – Tests Prior to Repair section describes how to resolve the most frequent issues experienced prior to sending the device to the Nayax Laboratory.

Lastly, the Safety and Handling section provides guidelines on how to clean and maintain the device.

Device Overview

The device overview section provides an overview of the device, feature highlights, device specifications and much more.

Device Summary

A complete M2M telemetry and contactless payment solution ideally suited for the unattended machine in various applications. This contactless device accepts all modes of cashless payments and processing methods in real-time:

- Debit and credit cards
- Mobile and NFC payments
- Prepaid cards and closed environment solutions

Feature Highlights

- ✦ Encryption algorithms and protocols supported: AES/DES/RSA/SHA-1/SSL
- ✦ Anti-Vandal with Dragontrail glass
- ✦ Bluetooth 4.0/iBeacon
- ✦ Decorative round lighting
- ✦ ARM Technology – 2x Cortex, 32 bit, 180/216MHz

Device Specifications


Installation Environment		
Operating Temperature	-20 °C to +55 °C	-4°F to +131°F
Storage Temperature	-40 °C to +85 °C	-40°F to +185°F
Humidity	25% to 95% (non-condensing)	
Dust & Water Resistance	IP 66	
Flammability	UL-94 V0	
Safety	CE, FCC, RoHS	
Physical Dimensions		
Diameter	85 mm	3.3 inch
Depth	28 mm	1.1 inch
Main Features		
Display Screen	High quality color Touch LCD Display 2.4 inch IPS, 400nits 320 x 240 pixels + 4 LEDs + 6 Touch buttons	
Architecture	ARM Technology – 2xCortex, 32 bit, 180/216MHz	
Audio	Speaker + Buzzer	
Localization	Multi language support - LCD text & voice audio instructions	
Security	Support DES, 3DES, AES, RSA, ECC, SHA1 algorithms, Random Number Generator	
Power Supply	12-42V DC, 12-24V AC; 5 Watts	
Power Consumption	Recommended External Power Supply: 24V DC / 2Amp.	
Anti-Vandal	Dragontrail glass	
Power-loss protection	Super capacitors for safe shutdown mechanism	

Communication & Interfaces	
External Interface	Ethernet, 2 X RS232 (RS232 or TTL level through SW), USB Device, External reader
Contactless	13.56 MHz : NFC, MIFARE, ISO 14443 Type A and B, ISO 15693
Pulse Input/Output	6 pulse input/output interfaces + 1 Inhibit input
External Sensors support	1 Door open & 1 Temperature
Communication	3G/4G/Ethernet/NFC
Machine Protocols	MDB / DEX / DDCMP / Pulse / VCCS / ccTalk / JVMA
Payment	
Contactless	EMV Level 1
	Level 2: Visa payWave, MasterCard PayPass, UnionPay qPBOC, AMEX ExpressPay, JCB J/Speedy, Discover D-PAS, CUP QuickPass


Device Components

Front Panel

Front Panel Color - Yellow / Black

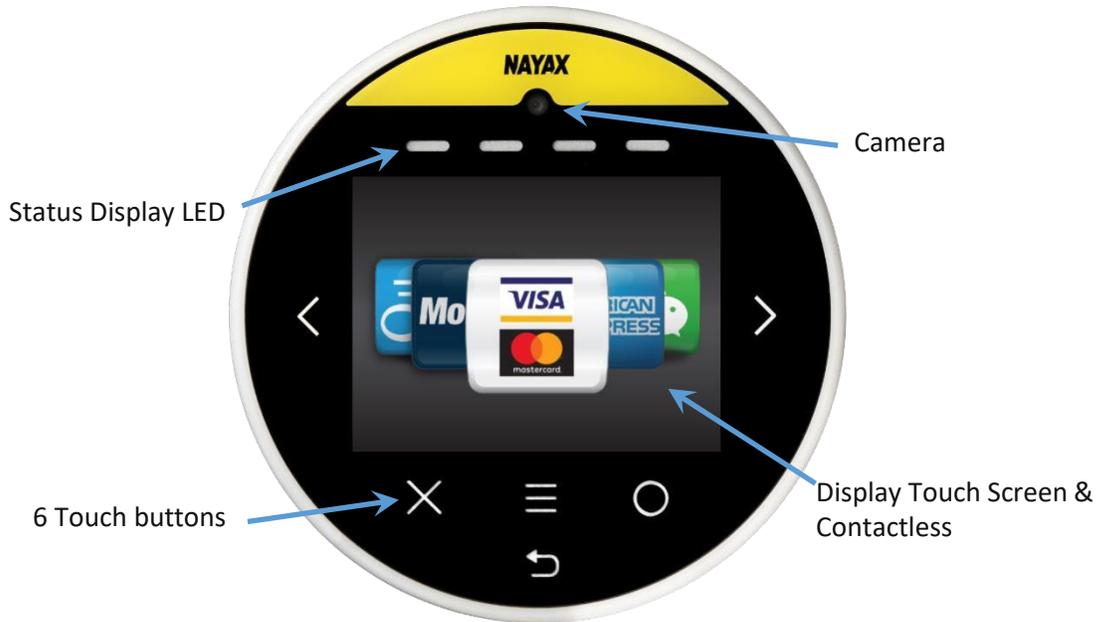

Rear Side

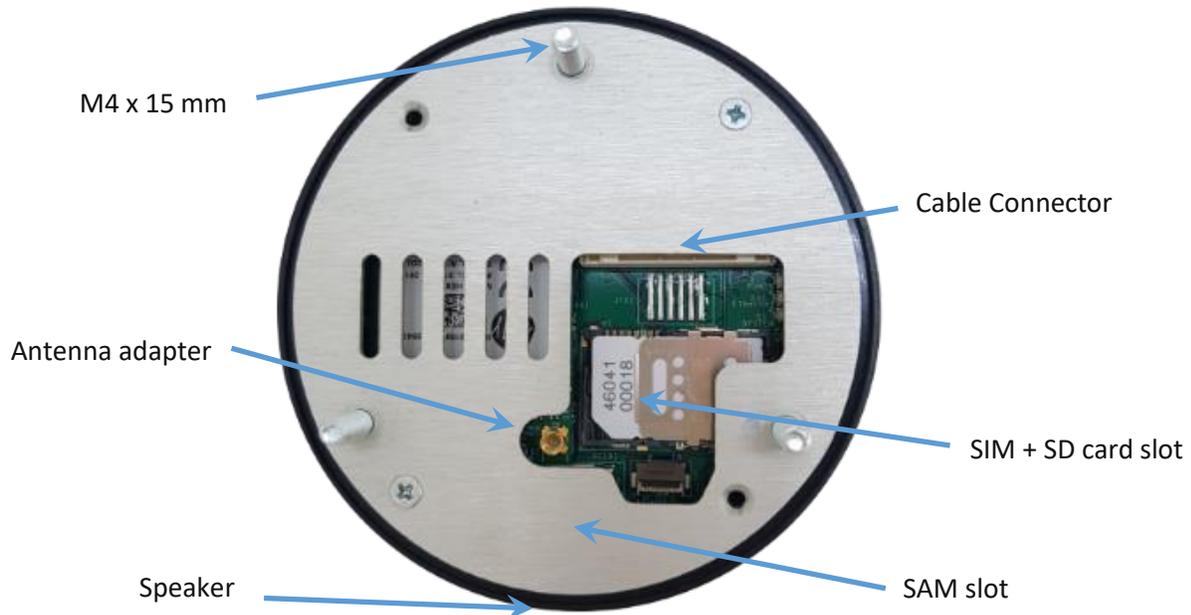

Device 2D Scheme



NYX PARTS 05 (Block) ASSY

Device Cables


Nayax provides different configuration cables to suit different machines. The below table refers to each cable and its configuration.

Image	Connector	Connect to
	MDB	MDB at vending machines
	DEX	DEX
	RS232 DB9 Female Output	Serial
	Device 40-pin	Nayax Onyx
	LAN	LAN cable


Device Connector Scheme (40-Pin)



Additional Accessories (Included in Box)

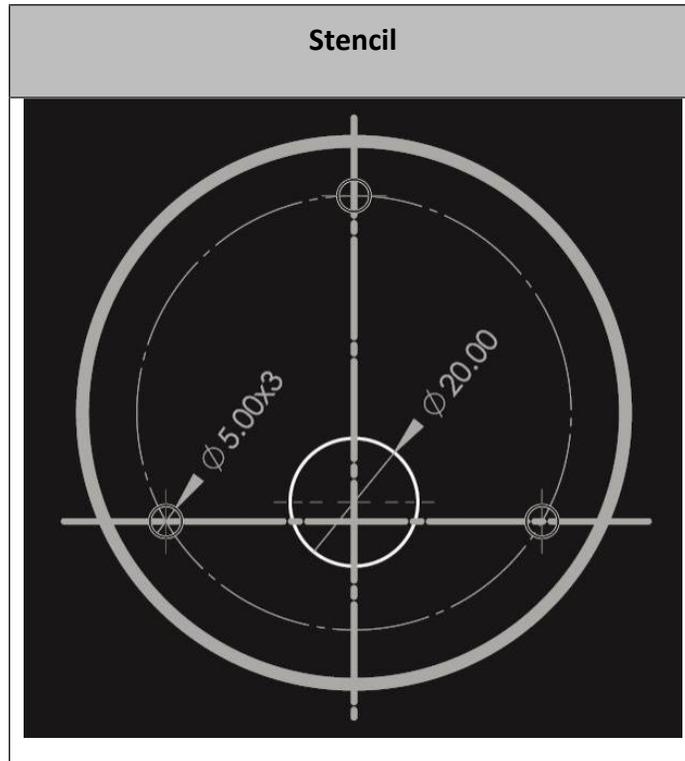

Additional Accessories (Optional)

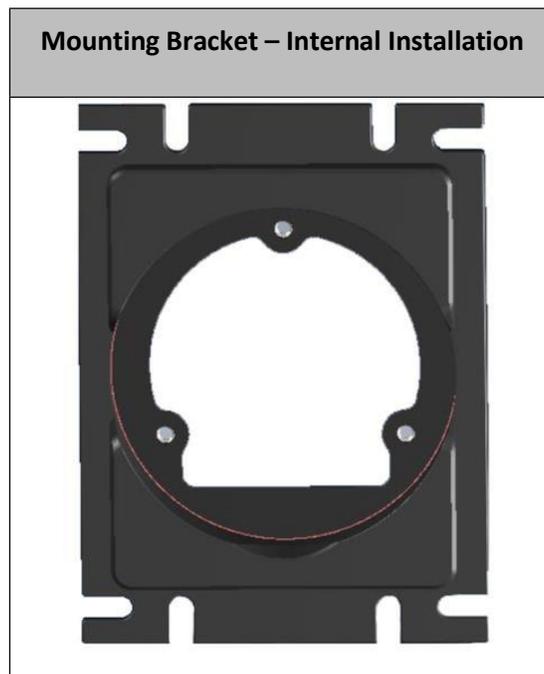


Getting Started

Getting Started section briefly explains how to install the device on the machine, the operating and testing process and the different screens.

Installation

The latest Installation Guide version is currently available and can also be downloaded from NayaxVend. The Onyx Quick Guide has been included in your box for your quick reference.

Device Dismantling

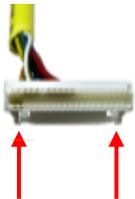

To unplug the Onyx connector, you must press both sides of the releasing bridge at the same time to avoid damaging the releasing bridge.

Operating and Testing

Pro Tip

Before performing any checks, make sure that the machine is loaded with products and that the prices are updated in the system.

1. Turn on the machine.
2. Once the Onyx is powered-up, a Self-Test is automatically initiated that performs a SIM card and Server Connectivity check.



Note: *If the device is not installed correctly, you may see an error message*

3. Once the Onyx is fully initialized, carry out the following trial purchases
 - a. Cash /Credit Purchase
 - b. E-money (E.g. A prepaid card transaction)
 - c. Canceled transaction to confirm that credit is not retained

Once all purchases are successfully completed, the unit is fully installed and ready for use!

Pro Tip

*In case you need to send your device to the Nayax Laboratory for review, refer to the **Error! Reference source not found. Error! Reference source not found.** Prior to Repair.*

Configure Onyx Settings in NayaxVend

- ✦ Refer to the below attributes used to configure the Onyx device in the NayaxVend system.
- ✦ Payment Methods - Controls the type of payments that are displayed on the Welcome screen (VISA, Mastercard, Apple Pay, Samsung Pay, etc.)
- ✦ Support WEB - Displays the website that is visible under the Menu - Contact Us function.
- ✦ Support Phone Number - Displays the phone number that is visible under the Menu -Contact Us function.
- ✦ Technician Code - Controls the pin code to access the Technician mode screen.
- ✦ Menu Timeout - Controls the timeframe (in seconds) for the unit to return to the Welcome screen after the menu button is pressed.
- ✦ Menu Functions - Controls the options to be displayed when the Menu button is pressed. It is possible to disable the Menu button entirely or display only the selected features such as:
 - I. Technician Mode
 - II. Report a Problem
 - III. Contact Us
 - IV. Device Info
 - V. Nutrition Facts
 - VI. Languages

Technician Mode



To enter the **Technician Mode** either present the Technician Card in the Idle mode or click the **Triple Bar** from the Menu. Click the **Technician Mode** button and then enter the **technician code** and click the green **OK** button.

Technician Mode Commands

Under the technician mode, three different screens are visible.

The first screen consists of two buttons that are configured by logging into the Management Suite – NayaxVend DCS.


The next two screens consist of a pre-defined collection of options that are listed below:

Icon	Icon Name	Description
	Cash Collection	Indicates to the server that cash was collected
	Poll	Initiates Keep Alive communication with the server
	Reboot	Checks for updated device version in the boot server
	Inventory Fill	Indicates to the server that the machine inventory was filled
	Fee	Defines the extra charge (convenience fee) for various payment methods
	Reset	Restarts the Onyx firmware
	Read Audit File	Initiates DEX read from the machine and sends it to the server
	Advanced Settings	Configure additional Nayax device parameters
	Modem Info	Displays modem details, version info, reception level, and so on
	View Audit	Displays DEX file on screen
	Volume	Adjust the audio volume level
	Language Settings	Set the audio and text languages

Appendix 1 – Tests Prior to Repair

The below procedure needs to be carried out by the Operator before sending the device to be fixed at the Nayax laboratory.

1. Connect the Onyx **Cable Connector** to get power from the machine – Refer to below Image 1.
2. Once the device starts to load, the following initiation messages are displayed:
 - I. **FW OK**
 - II. **Init mdm**
 - III. **RSSI 99** - In this case there are three options to proceed:
 - a. **RSSI 99** - Check the **External Antenna Adapter** connected to the board - Refer to Image 2
 - b. **(SIM) / RST** – This could refer to a SIM issue. In that case, confirm that the Sim socket is closed securely and if required, try to replace the SIM card - Refer to Image 3
 - c. **RSSI => 10** – This is normal, and you can proceed to the next step.
 - IV. **Mobile operator**
 - V. **Init GPRS**
 - VI. **TCPIP OK**
 - VII. **Gloader Test** – In case you need to install a new Firmware Version it will run:
 - a. **Gloader x.x.x TCPIP OK**
 - b. **Running FW ... TCPIP OK**
 - VIII. **Nayax**
 - IX. **Ready**

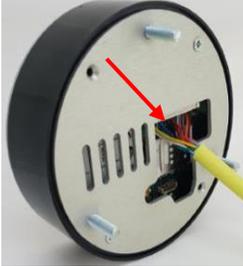Image No.	Title	Image	Description
1.	Onyx Connector		<p>Onyx cable connector (same connector for both MDB and Pulse cables).</p> <p>i Note: To disconnect the connector, press the latch (indicated with an arrow) before pulling out the cable.</p>
2.	External Antenna Adapter		<p>The External Antenna adapter connects to the board and to the external antenna that is provided by Nayax.</p>
3.	Sim Socket		<p>The SIM socket is opened by pulling up and closed by pulling down the socket.</p>

3. Test payment for contactless cards. In case of an error, send it the Nayax Laboratory for further tests.

Safety and Handling Instructions

It is advised to read the manual carefully before attempting to use the device.

Environmental Guidelines

It is recommended to avoid installing the device in direct sunlight to prevent any risk of burnouts. Make sure not to expose the product to any corrosive gas or liquid. It is important to deploy the device in non-condensing conditions.

Warranty and Liability

Thank you for choosing Nayax. Read the Nayax 24 months Limited Warranty Terms and Limitations included in your contract. In the unlikely event that your device needs repair service or for additional information, please contact us at support@nayax.com.

Your warranty shall be void in case the device is damaged due to vandalism and/or any corrosion issues.

Cleaning Instructions

You can use a soft, dry cloth for cleaning purposes. In case your device is extremely dirty, use a small amount of alcohol. Make sure not to use organic solvents such as thinner and benzene.