

PIKO CI

Solar inverter 30/50/60 kW



Operating manual

Legal notice

KOSTAL Solar Electric GmbH
Hanferstraße 6
79108 Freiburg i. Br.
Germany
Tel. +49 (0)761 477 44-100
Fax +49 (0)761 477 44-111

www.kostal-solar-electric.com

Exclusion of liability

All names, trademarks, product names and other designations used in this manual may be legally protected even if not indicated as such (e.g. as a trademark). KOSTAL Solar Electric GmbH assumes no liability for their free usage. The illustrations and texts have been compiled with great care. However, the possibility of errors cannot be ruled out. The compilation is made without any guarantee.

General note on gender equality

KOSTAL Solar Electric GmbH is aware of how language impacts on gender equality and always makes an effort to reflect this in documentation. Nevertheless, for the sake of readability we are unable to use non-gender-specific terms throughout and use the masculine form instead.

© 2022 KOSTAL Solar Electric GmbH

All rights reserved by KOSTAL Solar Electric GmbH, including those of reproduction by photocopy and storage in electronic media. Commercial use or distribution of the texts, models, diagrams and photographs appearing in this product is not permitted. This manual may not be reproduced, stored, transmitted or translated in any form or by means of any medium, in whole or in part, without prior written permission.

Valid from version:

Firmware (FW): V3.10

Internal code (Control board CB): PIKO CI 30 - 011800 / PIKO CI 50/60 - 011600

Communication board version (CSB): 011801

KOSTAL PIKO CI (App): V6.10.0



Contents

1.	General information.....	5
1.1	Contact	6
1.2	About this manual	7
1.3	Target group	8
1.4	Exclusion of liability	9
1.5	Open Source licence	10
1.6	Proper use	11
1.7	EU Declaration of Conformity.....	12
1.8	Notes in this manual	13
1.9	Important safety instructions.....	15
1.10	Navigation in the document	18
1.11	Labels on the device.....	19
2.	Device and system description	21
2.1	System overview	22
2.2	Device overview.....	23
2.3	Functional overview	26
3.	Installation	31
3.1	Transport and storage	32
3.2	Scope of delivery	33
3.3	Installation	34
3.4	Electrical connection.....	40
3.5	Overview of communication connections.....	45
3.6	Mounting WiFi antenna.....	46
3.7	Types of communication	47
3.8	Communication via LAN	49
3.9	Communication via RS485	51
3.10	Communication via WiFi	53
3.11	Connecting the KOSTAL Smart Energy Meter	54
3.12	Connecting central grid and system protection.....	61
3.13	Connecting ripple control receiver	63
3.14	Closing the inverter.....	65
3.15	Connecting PV modules	66
3.16	Initial commissioning.....	75
4.	Operation and operating the device.....	78
4.1	Switching on the inverter	79
4.2	Switching off the inverter	81

	1	2	3	4	5	6	7	8	9	10
4.3										
4.4										
4.5										
4.6										
5.										
5.1										
5.2										
5.3										
5.4										
5.5										
5.6										
6.										
6.1										
6.2										
6.3										
7.										
7.1										
7.2										
7.3										
7.4										
7.5										
7.6										
7.7										
8.										
8.1										
8.2										
9.										
9.1										
9.2										
10.										
10.1										
10.2										
10.3										
10.4										

1. General information

1.1	Contact.....	6
1.2	About this manual.....	7
1.3	Target group.....	8
1.4	Exclusion of liability	9
1.5	Open Source licence.....	10
1.6	Proper use	11
1.7	EU Declaration of Conformity	12
1.8	Notes in this manual.....	13
1.9	Important safety instructions	15
1.10	Navigation in the document.....	18
1.11	Labels on the device	19



1.1 Contact

Thank you for choosing a device from KOSTAL Solar Electric GmbH.

If you have any technical questions, please call our service hotline:

- Germany and other countries (language: German, English):
+49 (0)761 477 44-222
- Switzerland:
+41 32 5800 225
- France, Belgium, Luxembourg:
+33 16138 4117
- Greece:
+30 2310 477 555
- Italy:
+39 011 97 82 420
- Poland:
+48 22 153 14 98
- Spain, Portugal (language: Spanish, English):
+34 961 824 927

Please have the following information to hand for speedy processing:

- Type designation
- Serial number (see type plate on the device)



1.2 About this manual

This manual is intended for the operator and electrician. It contains information relating to safe operation and installation. Activities that may only be carried out by an electrician are marked separately. Pay particular attention to the information regarding safe usage. KOSTAL Solar Electric GmbH assumes no liability for damages arising from the non-observance of this manual.

This manual is an integral part of the product. It applies exclusively to the device from KOSTAL Solar Electric GmbH. Keep all documents permanently for reference and pass them on to any subsequent operator.

The electrician and operator must have unrestricted access to these instructions at all times. The installer must be familiar with this manual and follow all instructions.

The most recent version of the operating manual for the product is available in the download area at www.kostal-solar-electric.com.



1.3 Target group

This manual is intended for trained and qualified electricians who are entrusted with installing, maintaining and repairing the device.

The devices described in this manual differ from one another in terms of particular technical details. Information and instructions that only apply to certain device types are identified accordingly.

Information concerning your safety or that of the unit is specifically noted.

Operator

As the operator, you are responsible for the device. You are responsible for the proper use and safe use of the device. This also includes instructing people using the device.

As an operator without specialist electrical training, you may only carry out activities that do not require an electrician.

Electrician

As an electrician, you have recognised electrical engineering training. On the basis of this expertise, you are authorised to carry out the electrical work required in this manual.

Requirements of an electrician:

- Knowledge of general and specific safety and accident prevention regulations.
- Knowledge of electrical regulations.
- Knowledge of national regulations.
- Ability to recognise risks and avoid possible hazards.

Qualification

Some activities in this manual require expertise in electrical engineering. If activities are carried out by someone without the necessary knowledge and qualifications, serious accidents and death may result.

- Only carry out activities for which you have been qualified and instructed.
- Observe the references to electricians in this manual.



1.4 Exclusion of liability

Any use that differs from that described in **☑ Proper use, Page 11** or goes beyond the stated intended purpose is considered inappropriate. The manufacturer accepts no liability for any damage resulting from this. Modifications to the device are prohibited.

The device may only be used if it is safe to operate and is in a technically perfect condition. Any instance of misuse will result in the termination of the warranty, guarantee and general liability of the manufacturer.



IMPORTANT INFORMATION

The meter may only be installed, maintained and repaired by a trained and qualified electrician.

The electrician is responsible for ensuring that the applicable standards and regulations are observed and implemented. Work that could affect the electrical power system of the relevant energy supply company at the site of the solar power feed-in may only be carried out by qualified electricians expressly authorised (licensed) by the energy supply company.

This includes changes to the factory-preset parameters.

Only a qualified electrician may open the device. The device must be installed by a trained electrician (according to DIN VDE 1000-10 or BGV A3 accident prevention regulations or an internationally comparable standard) who is responsible for observing the applicable standards and regulations.

Work that could affect the electrical power system of the relevant energy supply company at the site of the solar power feed-in may only be carried out by qualified electricians expressly authorised (licensed) by the energy supply company. This includes changes to the factory-preset parameters. The installer must always observe the regulations of the energy supply company.

Factory settings may only be changed by qualified electrical installers or persons with at least comparable or higher technical qualifications, e.g. trades professionals, technicians or engineers. When doing so, all requirements are to be observed.



1

2

3

4

5

6

7

8

9

10

1.5 Open Source licence

This product contains Open Source software, developed by third parties and licensed using vehicles including GPL and/or LGPL.

For more details on this and a list of the Open Source software used and the associated licence texts, go to the Licences section on the website (Webserver) under **Licences**.



1.6 Proper use

The inverter converts direct current from photovoltaic (PV) systems into alternating current. This can be used as follows:

- For self-consumption
- For feed-in into the public grid

The device may only be used in grid-connected systems within the intended power range and under the permissible ambient conditions. The device is not intended for mobile use.

Inappropriate use may lead to injury or even death for the user or third parties. Material damage to the device and other equipment can also occur. The inverter may therefore only be used for its intended purpose.

All components fitted on the inverter or in the system must satisfy the standards and guidelines that apply in the country of installation.



1.7 EU Declaration of Conformity

KOSTAL Solar Electric GmbH hereby declares that the devices described in this document complies with the basic requirements and other relevant conditions of the directives listed below.

- Directive 2014/30/EU
(on the harmonisation of the laws of the Member States relating to electromagnetic compatibility (EMC))
- Directive 2014/35/EU
(on the harmonisation of the laws of the Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits Low Voltage Directive)
- Directive 2011/65/EU
(RoHS) to limit the use of certain hazardous substances in electrical and electronic equipment
- Directive 2014/53/EU
(RED Radio Equipment and Telecommunications Terminal Equipment) Provision of radio equipment

You will find a detailed EU Declaration of Conformity for the product in the download area at:

www.kostal-solar-electric.com



1

2

3

4

5

6

7

8

9

10

1.8 Notes in this manual

A distinction is made in this manual between warnings and information notes. All notes are identified in the text line with an icon.

Warnings

The warnings refer to life-threatening dangers. Serious injuries possibly resulting in death may occur.



DANGER

Indicates a direct hazard with a high level of risk, which, if not avoided, will result in death or serious injury.



WARNING

Indicates a hazard with a moderate level of risk, which, if not avoided, will result in death or serious injury.



CAUTION

Indicates a hazard with a low level of risk, which, if not avoided, will result in minor or slight injury or property damage.



IMPORTANT INFORMATION

Indicates a hazard with a low level of risk, which, if not avoided, may result in damage to property.



INFO

Information notes contain important instructions for the installation and problem-free operation of the device. These must be followed at all times. The information notes also point out that failure to observe instructions may result in damage to property or financial damages.

Warning symbols



Danger



1

2

3

4

5

6

7

8

9

10



Danger due to electrical shock and discharge



Danger due to burns

Symbols within the information notes



The symbol indicates activities that may only be carried out by an electrician.



Information or tip



Important information



Damage to property possible



1.9 Important safety instructions

The safety instructions in this manual must be observed during all work on the device.

The product has been developed and tested in accordance with international safety requirements. Nevertheless, there are still risks, which may result in personal injury and damage to property. Therefore, pay special attention to the safety instructions mentioned in this chapter in order to avoid these risks at all times.



DANGER

Risk of death due to electrical shock and discharge

During operation, high voltages are present on the live parts and cables inside the product. Touching live parts or cables will result in death or life-threatening injuries from electrical shock.

- Before opening the device, de-energise it and secure it against being switched on again.



DANGER

Danger to life from electrical shock when touching live DC cables

When exposed to light, the PV modules generate a high DC voltage that is applied to the DC cables. Touching live DC cables will result in death or life-threatening injuries from electrical shock.

- Do not touch any exposed live parts or cables.
- Before working, de-energise the device and secure it against being switched on again.
- Wear suitable protective equipment during all work on the product.



CAUTION

Danger of burns from hot housing parts

Housing parts can become hot during operation. Touching hot housing parts can cause burns.

- During operation, only touch the inverter's housing cover.



CAUTION

Risk of fire due to overcurrent and heating of the mains cable

If mains cables are too small, they can heat up and cause a fire.

- Use a suitable cross-section
- Install line circuit breaker to secure against overcurrent.



POSSIBLE DAMAGE

Damage to the device

Potential risk of damage when setting the inverter down. Whenever possible, place the inverter on its back after unpacking.



IMPORTANT INFORMATION

Loss of warranty due to incorrect installation

Observe these instructions when selecting the installation site. Failure to observe these instructions may limit guarantee claims or render them fully null and void.

- Be absolutely sure to maintain the clearance around the inverter in order that the inverter remains cool.
- To mount the inverter, use the wall mount and fastening screws that are suitable for the substrate.



IMPORTANT INFORMATION

Damage to the device and loss of warranty due to installation by unqualified persons

The inverter may only be installed, maintained and repaired by a trained and qualified electrician.

The electrician is responsible for ensuring that the applicable standards and regulations are observed and implemented.

Work that could affect the electrical power system of the relevant energy supply company at the site of the solar power feed-in may only be carried out by qualified electricians expressly authorised (licensed) by the energy supply company.

This includes changes to the factory-preset parameters.



1

2

3

4

5

6

7

8

9

10



IMPORTANT INFORMATION

Cost saving by using a type A RCD

A type A RCD ≥ 300 mA can be used on the AC side as a residual current device (RCD).
Set the compatibility with a type A RCD in the Webserver.



1

2

3

4

5

6

7

8

9

10

1.10 Navigation in the document

To simplify navigation through this document, it contains clickable areas.

The table of contents takes you to the specified chapter in one click.

You can navigate to the referenced points in the document within the instruction text using the cross-references.



1

2

3

4

5

6


7

8

9

10

1.11 Labels on the device

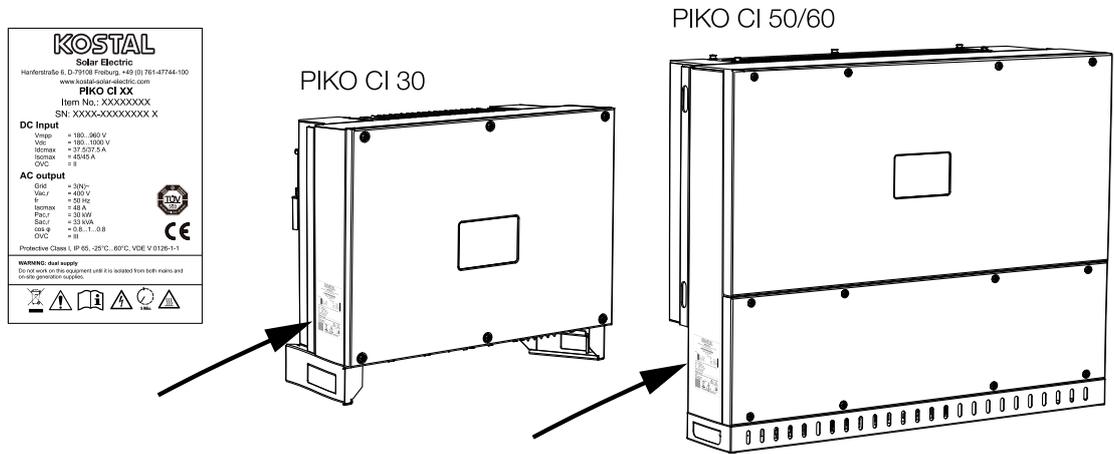

The type plate and other labels are attached to the inverter housing. These signs and labels may not be altered or removed.

Symbol	Explanation
	Danger due to electrical shock and discharge
	Danger due to burns
	Danger notice
	Danger due to electrical shock and discharge. Wait five minutes (discharge time of the capacitors) after shutdown
	Additional earth connection
	Observe and read operating manual

Symbol	Explanation
	<p>Device may not be disposed of with household waste. Observe the local application of disposal requirements.</p>
	<p>CE marking The product satisfies the applicable EU requirements.</p>



2. Device and system description

2.1 System overview.....	22
2.2 Device overview	23
2.3 Functional overview.....	26



1

2

3

4

5

6


7

8

9

10

2.1 System overview

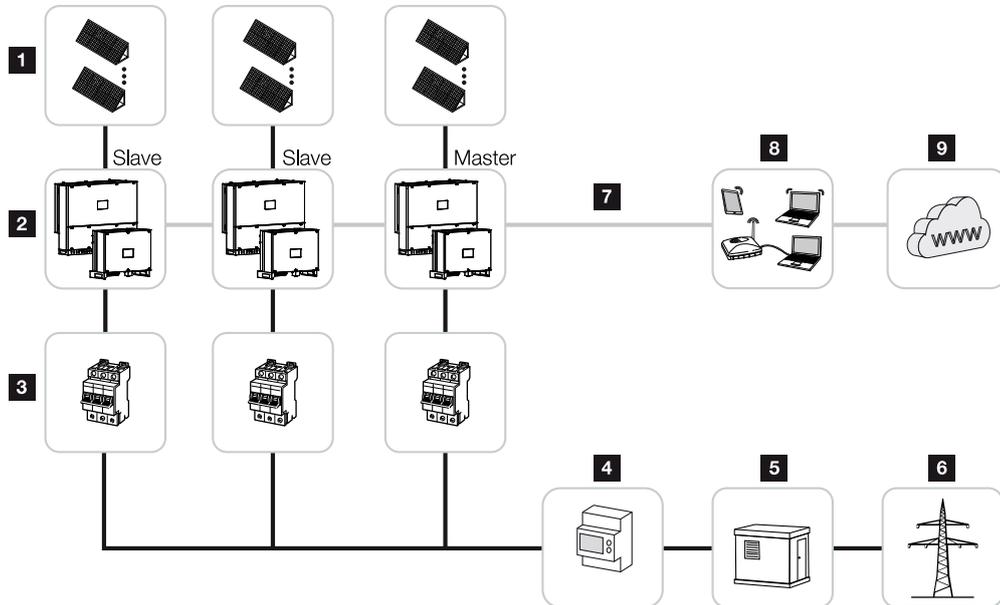

- 1 PV strings
- 2 PIKO CI 30 / 50 or 60 inverter
- 3 AC line circuit breaker
- 4 Energy meter
- 5 Distributor
- 6 Public grid
- 7 Communication connection (optional)
- 8 Router, PC connection
- 9 Internet



1

2

3

4

5

6

7

8


9

10

2.2 Device overview

PIKO CI 30 inverter

Exterior view

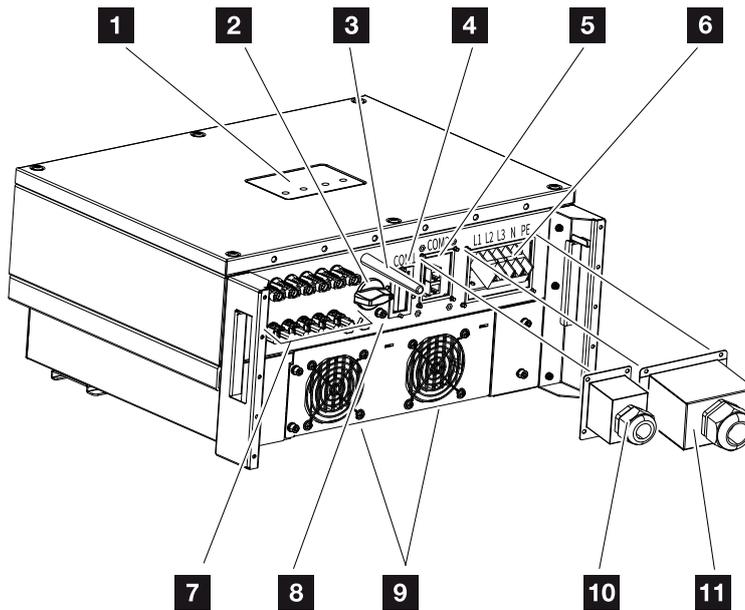

- 1 Status LED
- 2 DC switch
- 3 WiFi antenna
- 4 COM1 connection panel (communication module)
- 5 COM2 connection panel (RS485, LAN, digital inputs)
- 6 Connection for mains cable
- 7 Connections for PV modules
- 8 Additional PE connection (outside)
- 9 Fan
- 10 Cover for COM2 connection panel
- 11 Cover for grid connection



1

2

3

4

5

6

7


8

9

10

PIKO CI 50/60 inverter

Exterior view

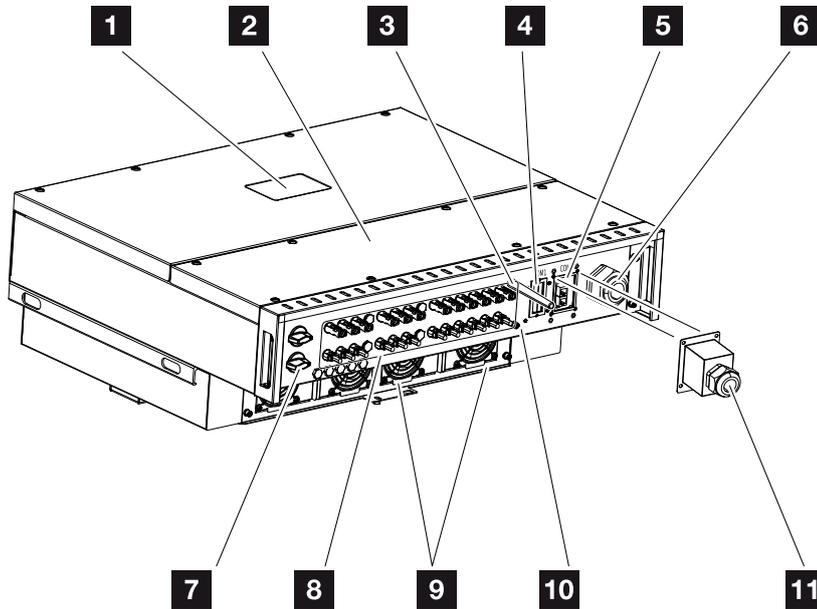

- 1 Status LED
- 2 Cover for terminal compartment
- 3 WiFi antenna
- 4 COM1 connection panel (communication module)
- 5 COM2 connection panel (RS485, LAN, digital inputs)
- 6 Cable opening for mains cable
- 7 DC switch
- 8 Connections for PV modules
- 9 Fan
- 10 Additional PE connection (outside)
- 11 Cover for COM2 connection panel



1

2

3

4

5

6

7

8


9

10

Status LED

The status LED provides information about the operational status of the inverter.

For more information: [Event codes, Page 125](#).

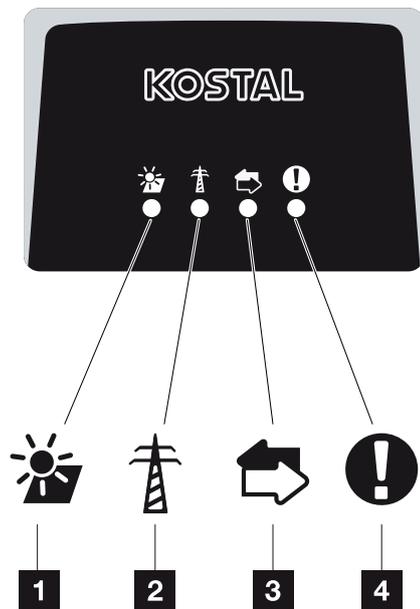

- 1 Status of PV modules
- 2 Status of grid
- 3 Status of communication
- 4 Warning message



1

2

3

4

5

6

7

8

9

10

2.3 Functional overview

The inverter converts energy from the connected PV modules into alternating current and feeds this into the public grid.

Three-phase alternating current

The PIKO CI inverters generate three-phase alternating current and, with their high output power, are optimised for use in medium and large PV systems. This makes them suitable for solar power plants, electricity farms and similar applications. The inverters can be operated in TT, TN-C, TN-S and TN-C-S grids.

Wireless commissioning

Commissioning is undertaken wirelessly using tablets or smartphones. The KOSTAL PIKO CI app is available for this purpose, which you can download free of charge from the App Store.

Recording power generation

By connecting an external energy meter, the inverter can monitor the energy flow and optimally control the output power according to grid requirements.

Communication

The inverter has various interfaces for communication purposes. These establish a connection to other inverters, sensors, energy meters or a link to the Internet.

- RS485/Modbus (RTU)

Data loggers or energy meters are connected to the Modbus interface to record the energy flow.

- LAN or WiFi can be used to connect the inverter to the local network via which it can then access the Internet and solar portal.

All data is transmitted encrypted.



Central grid and system protection

A remote connection enables connection to a circuit breaker and thus the implementation of central grid and system protection as required by technical regulations of the grid operators.

Ripple control receiver

For systems in which the grid operator controls the feed-in capacity using ripple control receivers, the inverter has the required digital inputs.

App functions

The KOSTAL PIKO CI app, which is available free of charge, provides a graphical user interface. The app is used to commission and configure the inverter and to display its status:

- Log in on inverter
- Log in as system operator or installer
- Status request
- Current feed-in values at grid connection
- Display log data / events
- Inverter version display
- Inverter configuration
(e.g. LAN connection, setting up the energy meter, etc.)



1

2

3

4

5

6

7

8

9

10

KOSTAL Solar Portal

The KOSTAL Solar Portal allows operation of the inverters to be monitored via the Internet. This protects your investment in a PV system against yield losses, e.g. through active e-mail alerts if events occur.

Registering for the KOSTAL Solar Portal is free of charge at www.kostal-solar-portal.com.

Functions include:

- Worldwide online access to the portal
- Graphic representation of the power and yield data
- Visualisation of data and thus being made aware of how to optimise self-consumption
- Notification of events by e-mail
- Data export
- Sensor evaluation
- Display and proof of a potential active power reduction by the grid operator
- Storage of log data for long-term and reliable monitoring of your PV system
- Providing system data for the KOSTAL Solar App

Additional information about this product is available on our website

www.kostal-solar-electric.com under **Products > Monitoring software > KOSTAL Solar Portal**.





1

2

3

4

5

6

7

8

9

10

Event codes

Events or faults during operation are stored in the inverter's event memory and transmitted to the KOSTAL Solar Portal or can be queried via the KOSTAL PIKO CI app.

For more information: [📄 Event codes, Page 125](#).

Service concept

For service purposes the event codes can be read out via the KOSTAL PIKO CI app or the KOSTAL Solar Portal. Your installer or service partner can then decide what action to take before on-site deployment. In this way, multiple on-site deployment can be avoided.



1

2

3

4

5

6

7

8

9

10

KOSTAL Solar Plan configuration software

Our free KOSTAL Solar Plan software simplifies the inverter layout process.

Just enter the system data and individual customer data and receive a recommendation for a KOSTAL solar inverter tailored to the planned solar system. All KOSTAL solar inverters are considered for this. In addition, the customer's electricity consumption is considered and the possible self-consumption and potential self-sufficiency quotas are displayed using standard load profiles.

Self-consumption and potential self-sufficiency are displayed.

The KOSTAL Solar Plan covers the following areas of the inverter layout:

- **Rapid layout**

Manual inverter layout taking account of the inverter specifications

- **Layout**

Automatic PV inverter layout with possible consideration of power consumption.

- **Storage layout**

Automatic hybrid/storage inverter layout with possible consideration of power consumption.

As well as providing an improved inverter layout, the KOSTAL Solar Plan also supports preparing quotations. Customer, project and installer data is added to the technical data entered by the user and is included with the quotation as a PDF overview. The planning data can also be saved in a project file and edited if required.

You can find additional information about this product on our website www.kostal-solar-electric.com in the section *Installer portal*.





3. Installation

3.1	Transport and storage.....	32
3.2	Scope of delivery	33
3.3	Installation.....	34
3.4	Electrical connection	40
3.5	Overview of communication connections	45
3.6	Mounting WiFi antenna	46
3.7	Types of communication	47
3.8	Communication via LAN.....	49
3.9	Communication via RS485.....	51
3.10	Communication via WiFi.....	53
3.11	Connecting the KOSTAL Smart Energy Meter.....	54
3.12	Connecting central grid and system protection	61
3.13	Connecting ripple control receiver	63
3.14	Closing the inverter	65
3.15	Connecting PV modules.....	66
3.16	Initial commissioning	75



3.1 Transport and storage

The function of the inverter has been tested and it has been carefully packaged prior to delivery. Upon receipt, check the delivery for completeness and any transport damage.



POSSIBLE DAMAGE

Damage to the device

Potential risk of damage when setting the inverter down. Whenever possible, place the inverter on its back after unpacking.

- Store all components of the inverter in the original packaging in a dry and dust-free place if the inverter is to be stored for a longer period of time before installation.
- Replace the packing material if it has been damaged.
- Do not stack more than four inverters on top of each other.
- To transport the inverter, use the recessed grips on the left and right of the bottom.




CAUTION

Danger of injury!


The inverter is very heavy.

- Do not lift or transport the inverter alone. Involve at least one or two other persons to avoid injury.

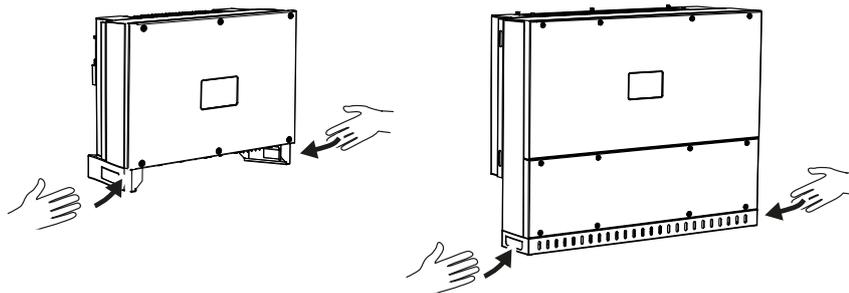

- Do not tip the inverter onto its side. Avoid tilted positions.
- Only place the inverter down on its back.
- Do not place the inverter down on its side or on the top.

3.2 Scope of delivery

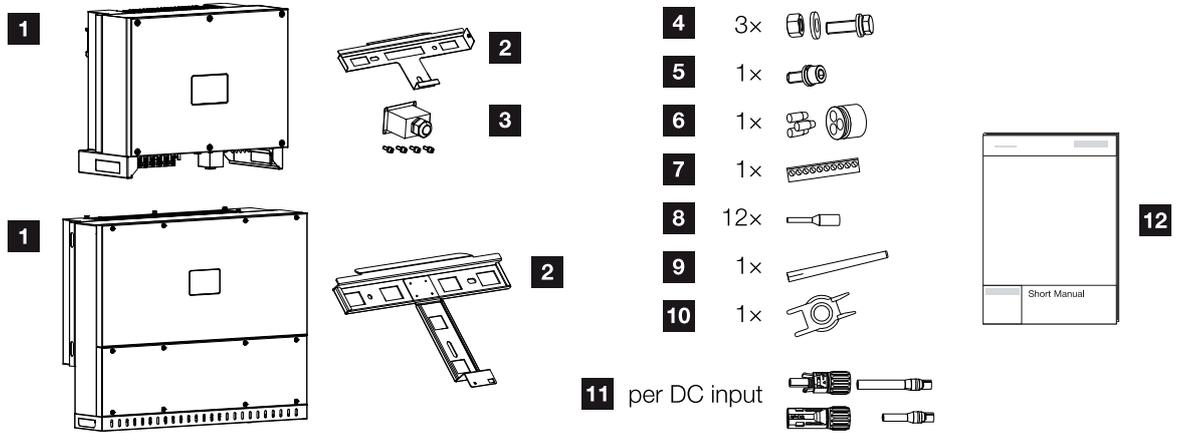

- 1 Inverter
- 2 Wall mount
- 3 Cover for AC connection
- 4 Mounting kit: 3x M12 screws with nut and washer
- 5 M6 lock screw (1x)
- 6 Plug seals for routing communication cables with 3 plugs
- 7 Plug connector for communication interface
- 8 12x core end sleeves for communication cables
- 9 WiFi antenna
- 10 Removal tool for DC plug connectors
- 11 DC plug connector (each DC input: 1x plug, socket)
- 12 Short manual

3.3 Installation

Selecting the installation site



IMPORTANT INFORMATION

Loss of warranty due to incorrect installation

Observe these instructions when selecting the installation site. Failure to observe these instructions may limit guarantee claims or render them fully null and void.

- Be absolutely sure to maintain the clearance around the inverter in order that the inverter remains cool.
- To mount the inverter, use the wall mount and fastening screws that are suitable for the substrate.



Install the inverter indoors.



Install the inverter in a protected outdoor area.



Protect the inverter from direct precipitation.



Protect the inverter from coarse soiling, e.g. leaves.



Protect the inverter against dust, contamination and ammonia gases. Rooms and areas containing livestock are not permitted as installation sites.



Do not install the inverter in potentially explosive areas.



1

2

3

4

5

6

7

8

9

10




-25 ... +60 °C

The ambient temperature must be between -25 °C and +60 °C.



0...100 %

The air humidity may be between 0% and 100% (condensing).

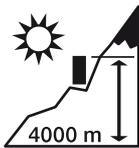


Inverter may only be installed up to an altitude of 4000 m.



A sufficient safety distance from flammable materials and potentially explosive areas in the vicinity must be ensured.




Mount inverter on a stable installation surface that can safely bear the weight. Plasterboard walls and wood planking are not permitted.

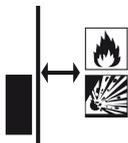


Do not install the inverter on a flammable installation surface.

WARNING! Risk of burns from hot parts on the inverter! Some of the inverter components can reach temperatures of over 80 °C during operation. Select the installation site in accordance with the information provided in these instructions. Always keep the ventilation openings clear.



Install the inverter vertically. Tilted position up to 15° is permitted.

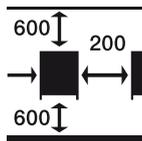

Maintain minimum distances and the necessary clearance.



The inverter makes noise during operation. Install inverter in such a way that people are not disturbed by operation noises.



1

2

3

4

5


6

7

8

9

10



The inverter must be easily accessible and the status LED must be easy to read.



Install the inverter out of reach of children or other unauthorised persons.



Lay cables with UV protection or use UV-resistant cables.



Installation dimensions



IMPORTANT INFORMATION

Be absolutely sure to maintain the clearance around the inverter in order that the inverter remains cool.


For installation, use retaining bolts that are suitable for the base, the weight of the inverter and the ambient conditions.

Requirement of retaining bolts:

Ø 12 mm, 8.8, A2-70


Installation dimensions with bracket

PIKO CI 30

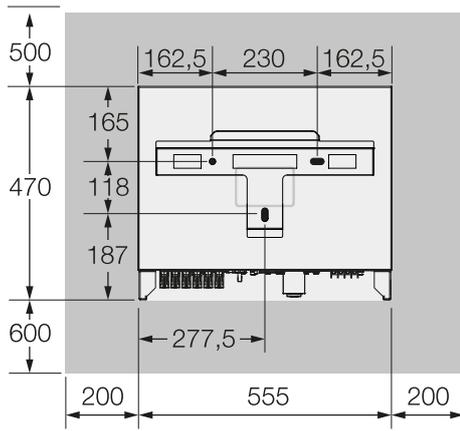


(mm)

PIKO CI 50/60

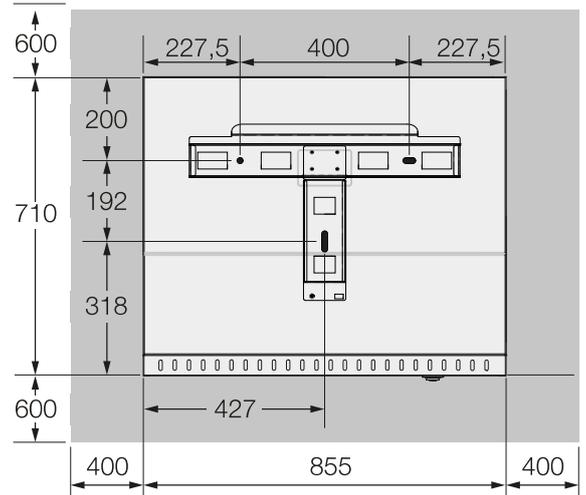

PIKO CI 30 = 500
PIKO CI 50/60 = 600

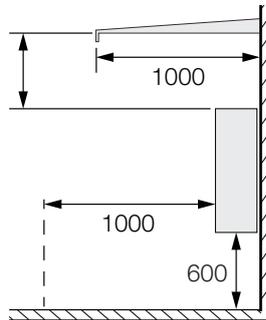


(mm)

Multiple inverters next to each other – spacing


! IMPORTANT INFORMATION

The values given are minimum distances. Increase the distances if the thermal conditions in the installation environment require it, e.g. in case of unfavourable ventilation or strong sunlight.


PIKO CI 30/50/60

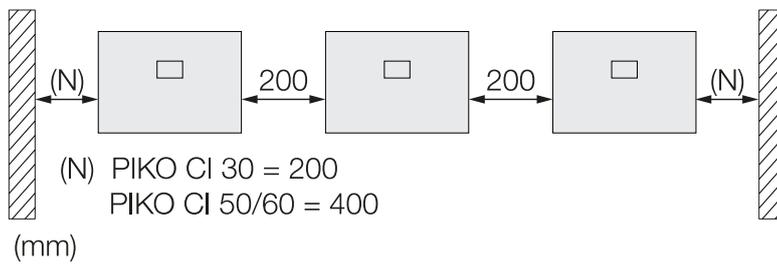

PIKO CI 30

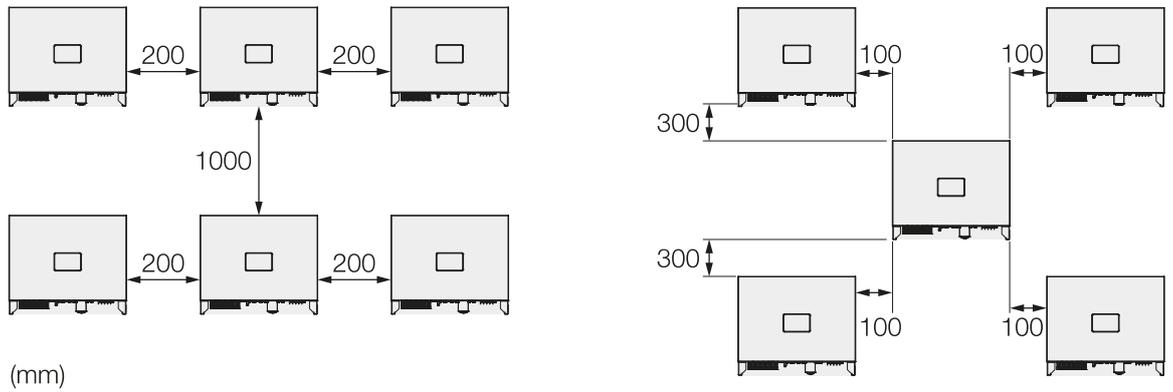

PIKO CI 50/60

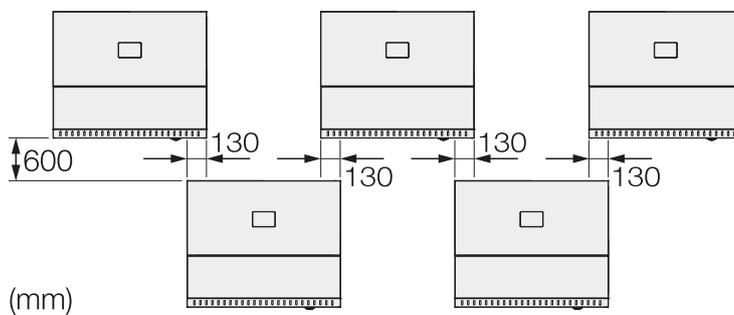



1

2

3

4

5

6

7


8

9


10

Installing the inverter

PIKO CI 30:

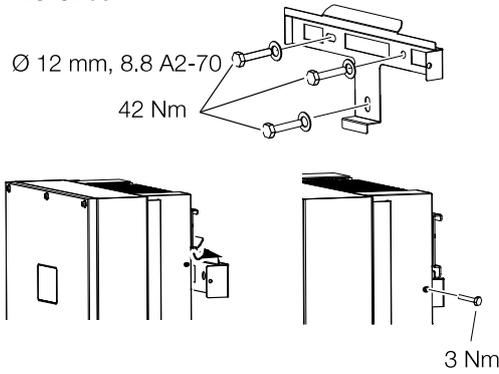

PIKO CI 50/60:

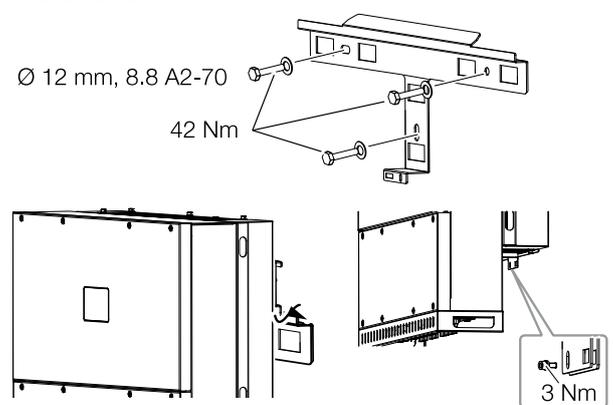

- Install the inverter on a solid wall or on a stand. Observe the prescribed distances and other specifications.



POSSIBLE DAMAGE

Damage to the inverter

If the wrong fastening material is used, the inverter may fall down.

- Install the inverter using suitable fastening material, which is suitable for the substrate.
-
- Install the bracket on the base.
 - Lift the inverter onto the bracket.



CAUTION

Danger of injury!

The inverter is very heavy.

- Do not lift or transport the inverter alone. Involve at least one or two other persons to avoid injury.
-
- Make sure that the inverter is correctly seated and cannot slip off the bracket.
 - Install the lock screw.



1

2

3

4

5

6

7


8

9

10

3.4 Electrical connection

Overview

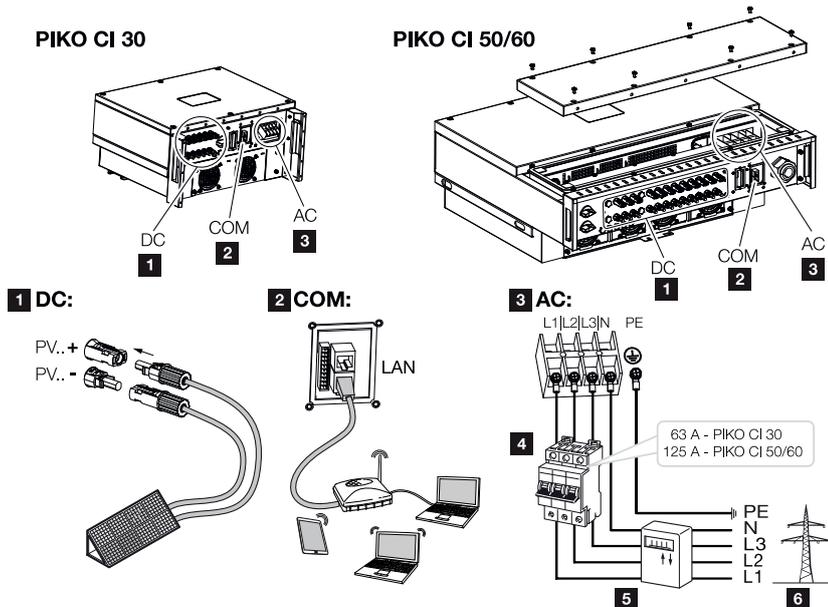

Inverter connections

- 1 Connections for PV modules
- 2 Communication connections
- 3 AC connection
- 4 Line circuit breaker
- 5 Energy meter (e.g. KOSTAL Smart Energy Meter)
- 6 Public grid



IMPORTANT INFORMATION

Make sure that the phases of the AC terminal and in the mains supply match.

This product may generate a direct current in the outer protective earthing conductor. If protective residual current devices (RCD) or residual current monitoring devices (RCM) are used, only type B ≥ 300 mA RCDs or RCMs are permitted on the AC side.

If type A RCD compatibility is activated in the device, a type A RCD can also be used.



1

2

3

4

5

6

7

8

9

10

Cable specification

Grid connection AC

Select the conductor cross-section according to the rated output current and the type of routing.

i INFO

For outdoor installation, use UV-resistant cable. Alternatively, lay the cable protected from solar radiation.

The 4-wire AC connection (3L/PE without N) is only possible in symmetrical networks.

Take into account necessary reduction factors for ambient temperature and accumulation (when laying several cables without spacing).

Example: Ambient temperature 40 °C: Reduction factor 0.87 (according to DIN VDE 0100-520 / HD 60364-5-52).

Cable type	Cable length
Copper conductor 4-wire (3L/PE without N) or 5-wire (3L/N/PE)	max. 200 m

PIKO CI	Wire cross-section	Cable diameter
30	10 - 25 mm ²	24 - 32 mm
50 / 60	30 - 50 mm ²	25 - 40 mm

Additional PE connection

PIKO CI	Wire cross-section
30	≥ 16 mm ²
50 / 60	≥ 35 mm ²

DC PV connections

Cable type	Wire cross-section	Cable diameter
Solar cable e.g. PV1-F	4 - 6 mm ²	6 - 8 mm

Connecting mains cable

1. Disconnect the power supply from the mains.



DANGER

Risk of death due to electrical shock and discharge!

De-energise device and secure against being switched on again.

2. Secure AC connection against being switched on again.
3. Switch the DC switch on the inverter to **OFF**.
4. Correctly lay the mains cable from the power distributor to the inverter.



IMPORTANT INFORMATION

Whenever working on the inverter, only ever use insulated tools to prevent short-circuits.

5. Install the necessary safety devices – line circuit breakers, residual current circuit breakers – in the mains cable.





CAUTION

Risk of fire due to overcurrent and heating of the mains cable


If mains cables are too small, they can heat up and cause a fire.

- Use a suitable cross-section
- Install line circuit breaker to secure against overcurrent.



M5 = PIKO CI 30
M8 = PIKO CI 50/60

	A	D
PIKO CI 30	10 - 25 mm ²	22 - 32 mm
PIKO CI 50/60	30 - 50 mm ²	35 - 40 mm

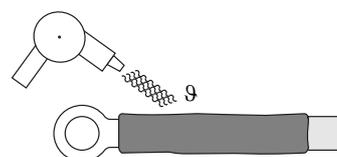



- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10


6. Strip 120 mm of insulation off the mains cable.
7. Fit suitable heat-shrinkable sleeves onto the wires. Strip insulation off ends of conductors and crimp the cable ring lug onto the ends of conductors.
8. PIKO CI 30:
Remove connection cover screws.
Lead mains cable through connection cover.

- PIKO CI 50/60:
Remove screws on the bottom cover and take off the cover.
Lead the mains cable through the feed-through into the terminal compartment of the inverter.

Connect the mains cable to the AC terminal as instructed on the label.

! IMPORTANT INFORMATION

Make sure that the phases of the AC terminal and in the mains supply match.
The 4-wire AC connection (3L/PE without N) is only possible in symmetrical networks.

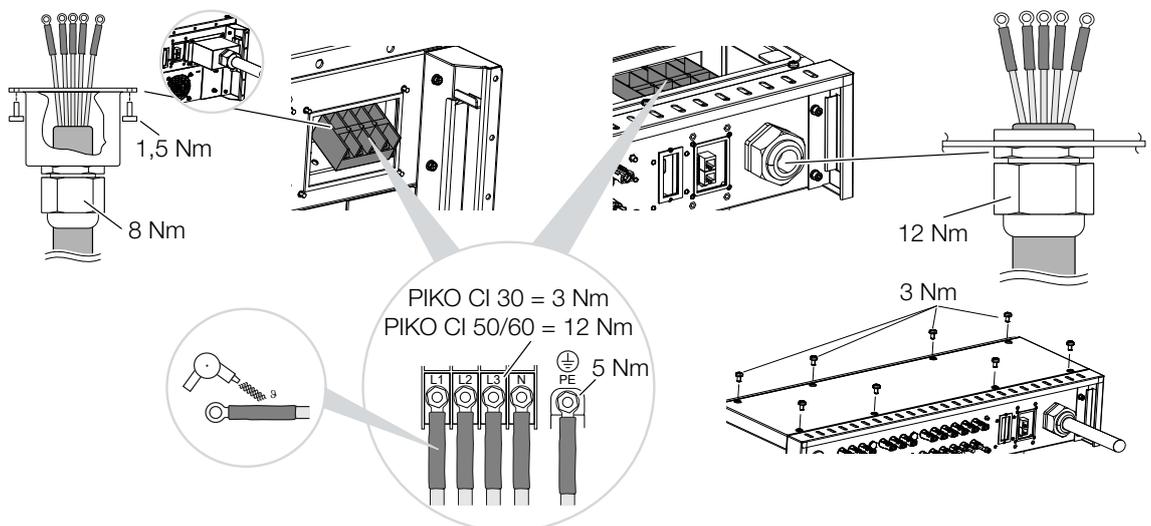

9. PIKO CI 30:
Attach connection cover to AC connection and screw it tight.
Torque: 1.5 Nm.

- PIKO CI 50/60:
Close the inverter and screw the cover tight.
Torque: 3 Nm.
10. Seal the mains cable with sealing ring and union nut. Tighten the union nut.



1

2

3

4

5

6

7


8

9



10

11. In countries in which a second PE connection is required, connect this at the marked place on the housing (outside).

PIKO CI 30:

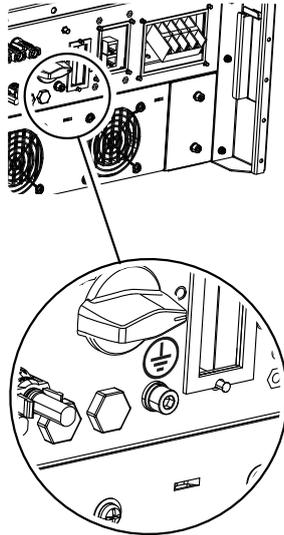

PIKO CI 50/60:

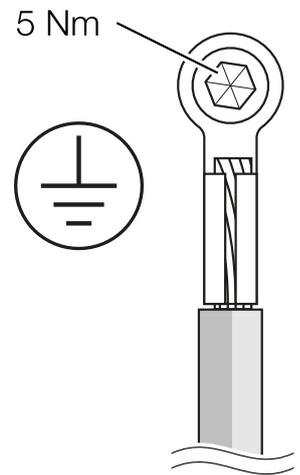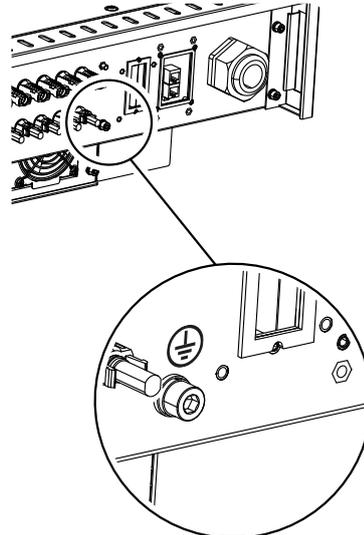

✓ Mains cable connected



1

2

3

4

5

6


7

8

9

10

3.5 Overview of communication connections

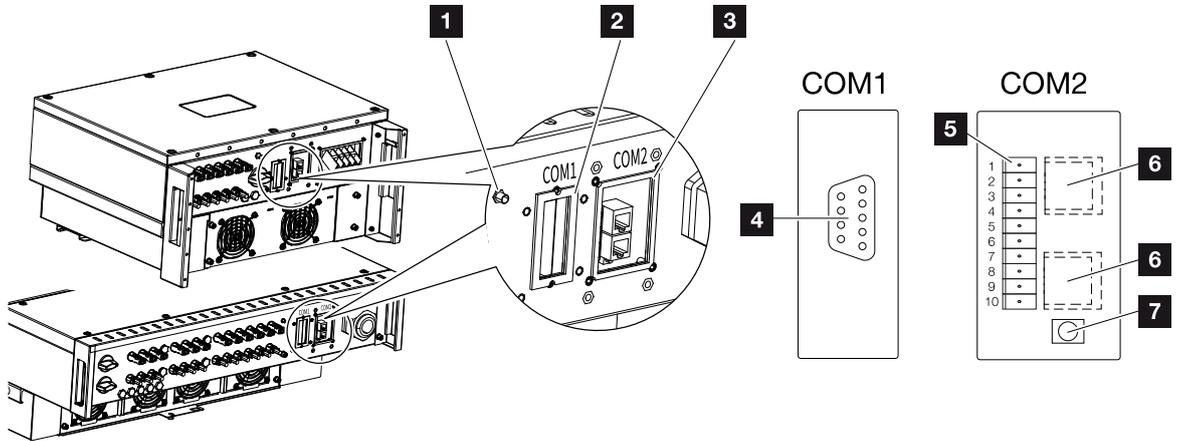

- 1 WiFi antenna
- 2 COM1 connection panel
- 3 COM2 connection panel
- 4 Socket for communication module
- 5 Connector strip for communication interface with RS485 interface, digital inputs for ripple control receiver and grid and system protection connection
- 6 LAN connection
- 7 Reset button for commissioning address (WLAN)

Item	Designation	Pin	Explanation
5	Communication interface	1	GND (ground) for Remote and DI1...4
		2	Remote: Central system protection
		3	DI4: Input 4
		4	DI3: Input 3
		5	DI2: Input 2
		6	DI1: Input 1
		7	RS485/Modbus interface B (input, data -)
		8	RS485/Modbus interface A (input, data +)
		9	RS485/Modbus interface B (output, data -)
		10	RS485/Modbus interface A (output, data +)
6	RJ45 terminal	-	LAN connection 1
		-	LAN connection 2



1

2

3

4

5

6



7

8



9

10

3.6 Mounting WiFi antenna

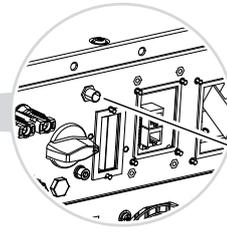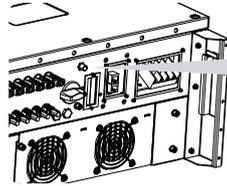PIKO CI 30

3 Nm

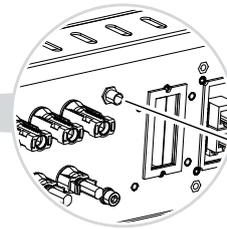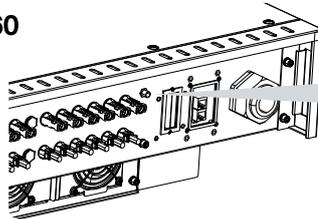
PIKO CI 50/60

3 Nm



1. Remove protective cap from connection thread on inverter.
 2. Screw the supplied WiFi antenna onto the stud bolt.
Tightening torque: 3 Nm
- ✓ WiFi antenna mounted.

3.7 Types of communication

PIKO CI 30

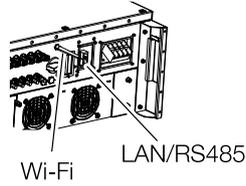

PIKO CI 50/60

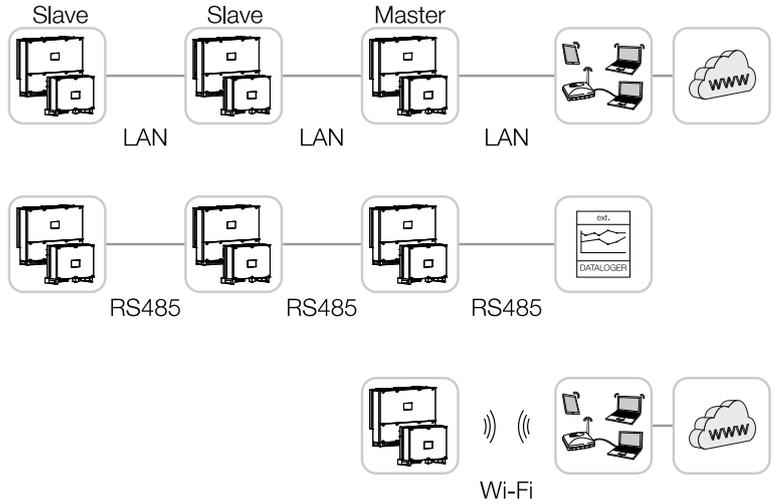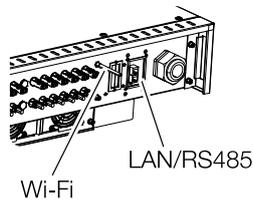

The PIKO CI inverter has interfaces for LAN, RS485 Modbus and WiFi. There are therefore various possibilities for networking one or more inverters with each other and controlling them.

You can also combine different types of connections with each other. In a solar power plant, for example, it may be useful to network several inverters in the field in a wired manner (LAN/Ethernet or RS485), and to produce the connection to the local communication hub wirelessly via a radio link.



LAN / Ethernet



INFO

Connecting the Ethernet cable to a router integrates the inverter into your own network and the inverter can then be contacted by all computers incorporated in the same network.

When networking via Ethernet, the inverter can be connected to the local network or the Internet. Use the RJ45 connection in the COM2 connection panel for this purpose. Computers, routers, switches and/or hubs or other devices can be connected to the network.

Communication via LAN, Page 49

RS485 Modbus

Modbus is an industry standard for networking industrial measurement and control systems. A data logger or energy meter, for example, can be connected via this connection to control the connected inverters. **Communication via RS485, Page 51**

WLAN / WiFi



INFO

At a later date, there are also plans for a connection from inverter to inverter.

Via WiFi, one or more inverters can be integrated into the local WLAN network, e.g. via a router or hub. **Communication via WiFi, Page 53**



1

2

3

4

5

6

7


8

9

10

3.8 Communication via LAN

Connecting inverter to LAN / Ethernet cable

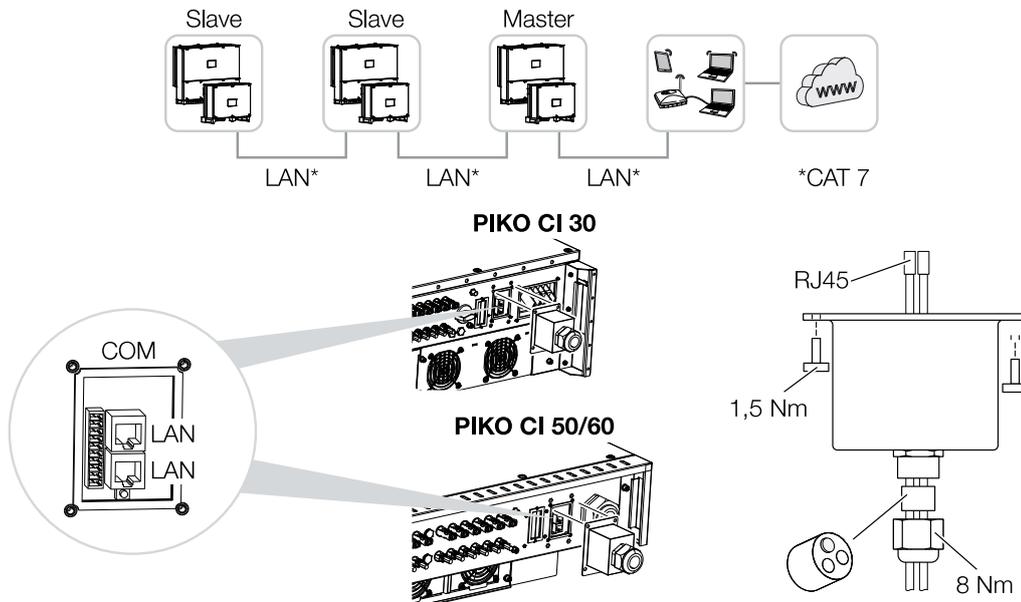

1. De-energise the inverter.
2. Lead the Ethernet cable through the COM2 cover and seal it with sealing ring and union nut.
3. Tighten union nut to the prescribed torque.
Torque: 8 Nm (M25).

i INFO

Use an Ethernet cable of category 7 (Cat 7, FTP) with a maximum length of 100 m as a network cable (Ethernet 10BaseT, 10/100 MBit/s).

4. Connect Ethernet cable to one of the LAN sockets in the COM2 connection panel. The second LAN socket is used to continue the network connection to further inverters.
5. Connect LAN/Ethernet cable to the computer or router.

i INFO

After commissioning, the settings for the Ethernet connection can still be configured in the KOSTAL PIKO CI app.

This includes, for example, the setting for IP mode, in which acquisition of an automatic IP address can be set.



1

2

3

4

5

6

7

8

9

10

6. The inverter is set as **Master LAN** or slave using the KOSTAL PIKO CI app on each inverter. To do this, go to **Settings > Communication settings > Master/Slave settings > Master/Slave settings** and then select **Master LAN** or **Slave**. The master forwards data to the slave inverters. This can be, for example, a feed-in limitation.
- ✓ LAN cable connected



1

2

3

4

5

6

7


8

9

10

3.9 Communication via RS485

Connecting inverter with RS485 cable

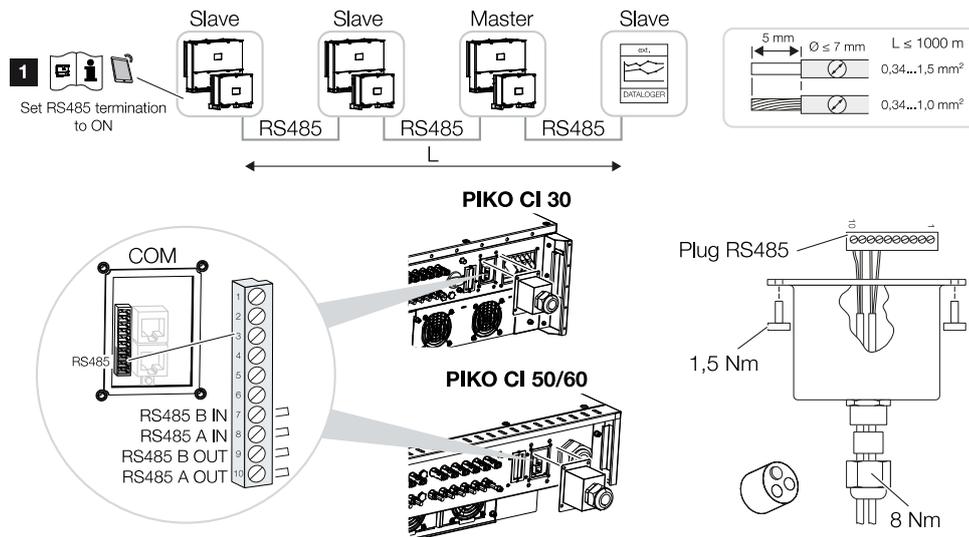

- 1 Activate RS485 termination on the last inverter.

Connecting the RS485 connection

1. De-energise the inverter. **Switching off the inverter, Page 81**
2. Lead the RS485 cable through the COM2 cover and seal it with sealing ring and union nut.
3. Tighten union nut to the prescribed torque.
Torque: 8 Nm (M25).

INFO

Requirements of communication cable:

Wire cross-section from 0.34 to 1.5 mm² (rigid) or 0.34 to 1.0 mm² (flexible)

Bus length max. 1000

Length of stripped insulation approx. 5 mm

4. Fit RS485 cable to the supplied plug (RS485 x in) and plug it into the interface in the COM2 connection panel. RS485 out is used to continue the network connection to further inverters.
5. Connect RS485 cable to external device (e.g. data logger).



1

2

3

4

5

6

7

8

9

10

i INFO

After commissioning, the settings for the RS485 connection still have to be configured in the app.

This includes, for example, setting the transmission speed.

6. The inverter is set as **Master LAN** or slave using the KOSTAL PIKO CI app on each inverter. To do this, go to **Settings > Communication settings > Master/Slave settings > Master/Slave settings** and then select **Master LAN** or **Slave**. The master forwards data to the slave inverters. This can be, for example, a feed-in limitation.
 7. The RS485 termination of the last inverter must be set to **ON** in the app. This can be done under **Settings > Communication settings > RS485 Settings > Terminating resistor**.
- ✓ RS485 cable connected.



1

2

3

4

5

6

7


8

9

10

3.10 Communication via WiFi

Connecting inverters via WiFi

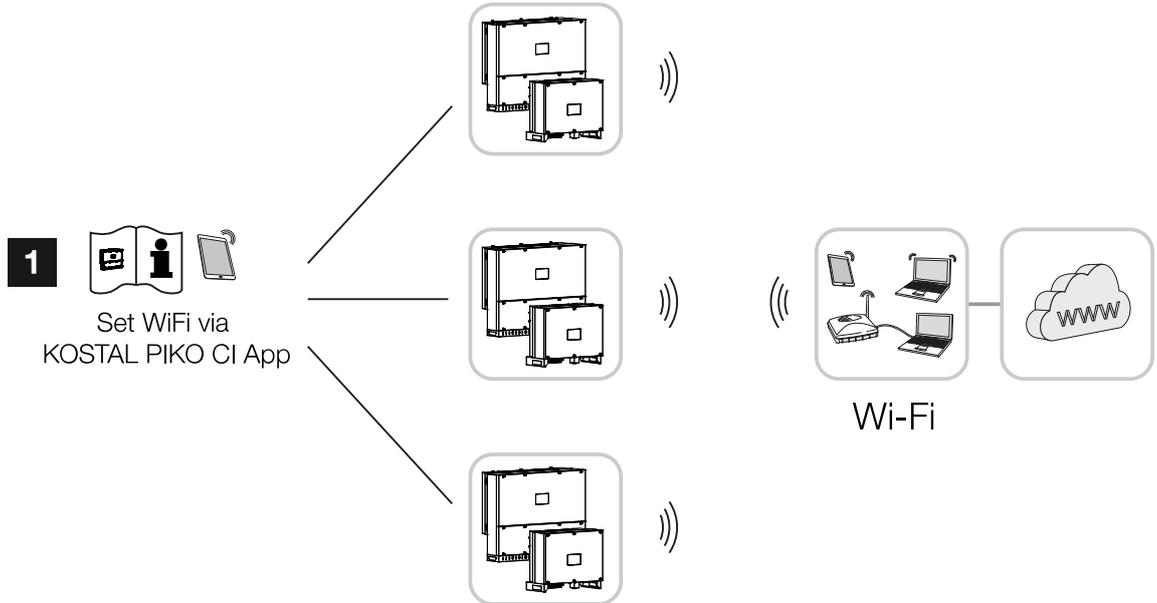

1 WiFi settings

1. After commissioning, the WiFi settings in the KOSTAL PIKO CI app must be configured in each inverter.

i INFO

If you have forgotten the WLAN password, you can reset it to the default value **12345678** using the reset button under the cover for COM2.

2. To do this, go to the following menu item and configure the settings:
Settings > Communication settings > WLAN settings > Select WLAN connection

✓ Inverter connected via WiFi.



3.11 Connecting the KOSTAL Smart Energy Meter

Connecting a KOSTAL Smart Energy Meter allows generation values and consumption values to be recorded or the output power of the inverter into the public grid to be controlled. In addition, the KOSTAL Smart Energy Meter can send data to the KOSTAL Solar Portal. To do this, the KOSTAL Smart Energy Meter must be set up in addition to the PIKO CI in the same system in the KOSTAL Solar Portal.

The energy meter is installed in the meter cabinet or in the main distribution board. Please also refer to the operating documentation of the KOSTAL Smart Energy Meter.



IMPORTANT INFORMATION

Only energy meters that have been approved for this inverter may be used.

You will find an up-to-date list of the approved energy meters on our website in the download area for the product.

The following energy meters are currently approved:

- KOSTAL Smart Energy Meter

The KOSTAL Smart Energy Meter can be connected to PIKO CI in two different ways. The connection method must then be set via the KOSTAL PIKO CI app.

-  **Communication connection for KOSTAL Smart Energy Meter via LAN, Page 55**
-  **Communication connection for KOSTAL Smart Energy Meter via RS485, Page 58**



1

2

3

4

5

6

7


8

9

10

Communication connection for KOSTAL Smart Energy Meter via LAN

Wiring diagram for energy meter LAN - grid connection

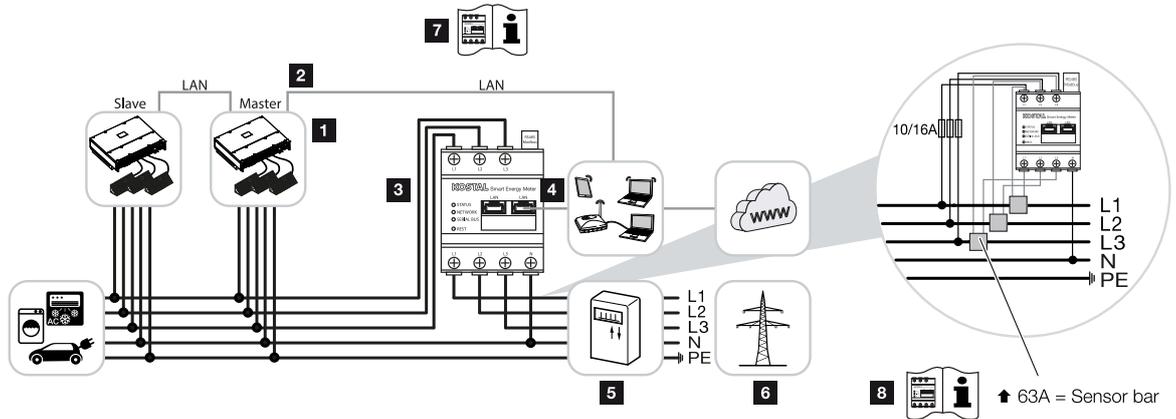

- 1 Inverter
- 2 LAN interface for inverter
- 3 KOSTAL Smart Energy Meter
- 4 LAN interface for KOSTAL Smart Energy Meter
- 5 Feed meter
- 6 Public grid
- 7 Read the operating manual of the KOSTAL Smart Energy Meter.
- 8 Use a current transformer for currents above 63 A. Read the operating manual of the KOSTAL Smart Energy Meter.

Connecting the KOSTAL Smart LAN Energy Meter

1. De-energise the mains cable.



DANGER

Risk of death due to electrical shock and discharge!

De-energise all devices and secure them against being switched on again.

2. Install the KOSTAL Smart Energy Meter as shown in the illustrations at the grid connection point in the house grid.
3. Feed the Ethernet cable on the inverter through the COM2 cover and seal it with sealing ring and union nut. Tighten union nut to the prescribed torque. Torque: 8 Nm (M25).



1

2

3

4

5

6

7

8


9

10

i INFO

LAN cable requirements:

- CAT7
- Max. 100 m

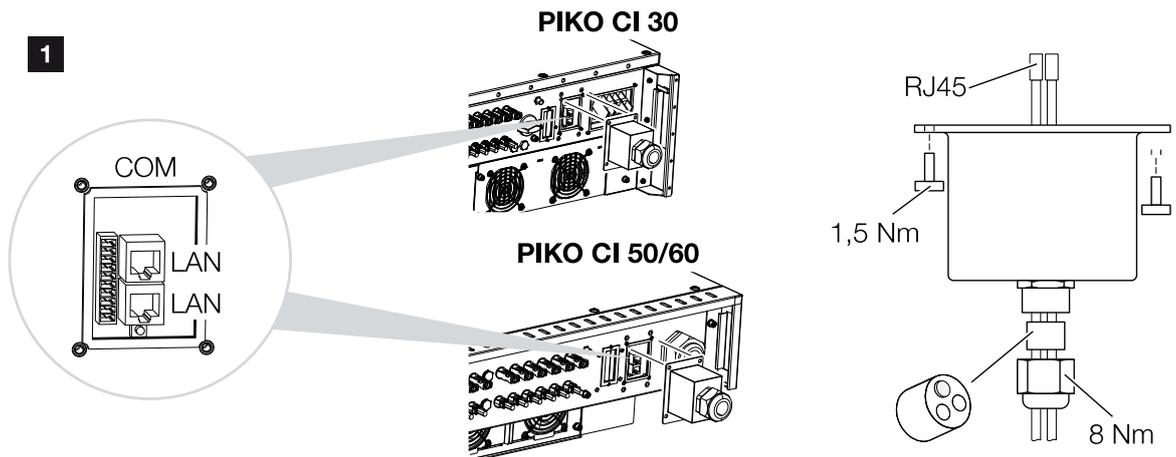

4. Connect Ethernet cable to one of the LAN sockets in the COM2 connection panel. The second LAN socket is used to continue the network connection to further inverters.
5. Mount COM2 cover cap.
Torque: 1.5 Nm
6. Connect the other end of the Ethernet cable to the router.
7. Establish a LAN connection from the KOSTAL Smart Energy Meter to the router.
8. In this variant, the KOSTAL Smart Energy Meter works as a slave and sends data to the inverter.
9. In the KOSTAL Smart Energy Meter, set **Modbus settings > Modbus TCP > Slave (Enable TCP Slave)** to **ON**.
10. To make the home consumption visible in the KOSTAL Solar Portal, in the KOSTAL Smart Energy Meter set **Inverter > Solar portal > Activate solar portal** to **ON**.

After commissioning, the following settings still have to be configured in the KOSTAL PIKO CI app.

1. The use and installation position of the KOSTAL Smart Energy Meter (KSEM) must be set in the KOSTAL PIKO CI app on the **Master** inverter.
This can be set under **Settings > Inverter settings > Power adaptation/controls > Energy management > Power limitation function > KSEM** and **Settings > Inverter settings > Power adaptation/controls > Energy management > Sensor position > Grid connection point** (default value).



1

2

3

4

5

6

7

8

9

10

2. The IP address of the KOSTAL Smart Energy Meter can be set in the KOSTAL PIKO CI app under **Settings > Power adaptation/controls > Energy management > IP address of energy meter**.
3. A power limitation of the grid feed-in (e.g. to 70%) must be entered in watts on the **Master** inverter.
This can be set under **Settings > Inverter settings > Power adaptation/controls > Energy management > Limitation of the active power to [W]**.



INFO

If power limitation is carried out in combination with the KOSTAL Smart Energy Meter, power limitation via a ripple control receiver (RCR) is not possible and must be deactivated.

4. The KOSTAL Smart Energy Meter is connected to the **Master** inverter. If not already done, configure this inverter as a **master LAN**.
This can be selected in the KOSTAL PIKO CI app under **Settings > Communication settings > Master/Slave settings > Master LAN**.
 5. All other inverters connected to the master inverter must be configured as **Slave**. The following default settings should be checked for all slave inverters:
Master/slave settings: Slave
Power limitation function: deactivated
Sensor position: Grid connection point
Activate ripple control receiver: OFF
- ✓ Inverter connected to the KOSTAL Smart Energy Meter .



1

2

3

4

5

6

7


8

9

10

Communication connection for KOSTAL Smart Energy Meter via RS485

Wiring diagram for energy meter RS485 – grid connection

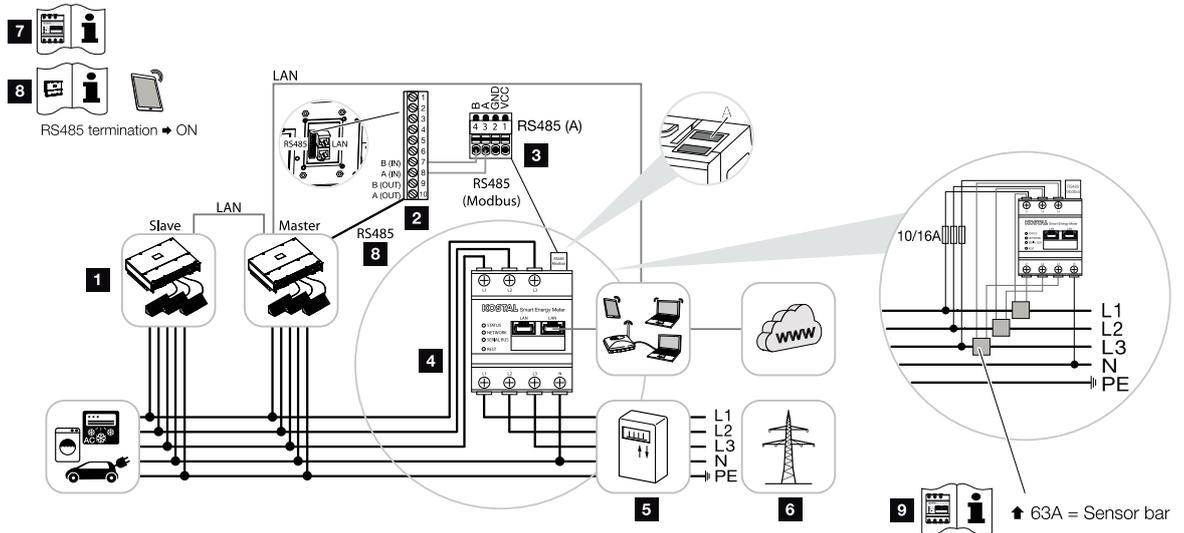

- 1 Inverter
- 2 RS485 interface for inverter
- 3 RS485 interface for KOSTAL Smart Energy Meter
- 4 KOSTAL Smart Energy Meter
- 5 Feed meter
- 6 Public grid
- 7 Read the operating manual of the KOSTAL Smart Energy Meter.
- 8 Set RS485 termination in the KOSTAL PIKO CI app to **ON**
- 9 Use a current transformer for currents above 63 A. Read the operating manual of the KOSTAL Smart Energy Meter.

Connecting the KOSTAL Smart Energy Meter

1. De-energise the mains cable.



DANGER

Risk of death due to electrical shock and discharge!

De-energise all devices and secure them against being switched on again.

2. Install the KOSTAL Smart Energy Meter as shown in the illustrations at the grid connection point in the house grid.



1

2

3

4

5

6

7

8

9

10


3. Correctly route the communication cable from the inverter to the control cabinet and connect to the KOSTAL Smart Energy Meter following the wiring diagram provided by the manufacturer.

i INFO

Requirements of communication cable:

- Wire cross-section from 0.34 to 1.5 mm² (rigid) or 0.34 to 1.0 mm² (flexible)
- Bus length max. 1000 m
- Length of stripped insulation approx. 5 mm

4. Feed the communication cable through the cover of the inverter for COM2 connection panel. Seal connection with sealing ring and union nut.

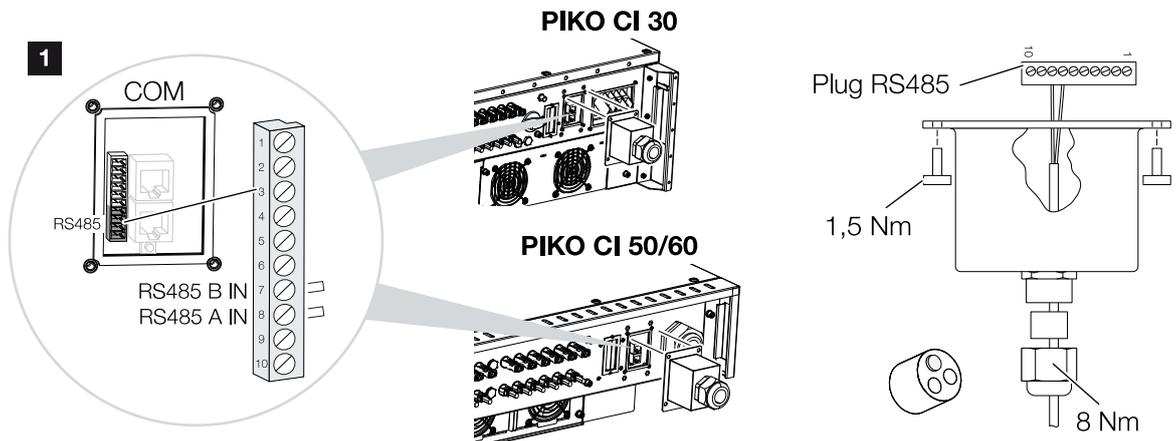

5. Connect the communication cable to the plug connector for the communication interface. Note the pin assignment.
Torque: 0.2 Nm.
6. Connect the plug connector on the inverter to communication interface in COM2 connection panel.
7. Establish a LAN connection from the KOSTAL Smart Energy Meter and the inverter to the Internet.
8. In this variant, the KOSTAL Smart Energy Meter works as a slave and sends data to the inverter.
9. In the KOSTAL Smart Energy Meter, select the KOSTAL PIKO CI for the RS485 A interface. Please refer to the operating manual of the KOSTAL Smart Energy Meter.
10. Mount COM2 cover cap.
Torque: 1.5 Nm

After commissioning, the following settings still have to be configured in the KOSTAL PIKO CI app.



1

2

3

4

5

6

7

8

9

10

1. The use and installation position of the KOSTAL Smart Energy Meter (KSEM) must be set in the KOSTAL PIKO CI app on the **Master** inverter.
This can be set under **Settings > Inverter settings > Power adaptation/controls > Energy management > Power limitation function > KSEM** and **Settings > Inverter settings > Power adaptation/controls > Energy management > Sensor position > Grid connection point** (default value).
2. A power limitation of the grid feed-in (e.g. to 70%) must be entered in watts on the **Master** inverter.
This can be set under **Settings > Inverter settings > Power adaptation/controls > Energy management > Limitation of the active power to [W]**.

**INFO**

If power limitation is carried out in combination with the KOSTAL Smart Energy Meter, power limitation via a ripple control receiver (RCR) is not possible and must be deactivated.

3. The inverter to which the KOSTAL Smart Energy Meter has been connected must be configured as the **Master**.
This can be selected under **Settings > Communication settings > Master/Slave settings > Master RS485**.
 4. On the **Master** inverter connected to the RS485 communication line, set the RS485 termination to **ON** in the KOSTAL PIKO CI app.
This can be done under **Settings > Communication settings > RS485 Settings > Terminating resistor**.
 5. All other inverters connected to the master inverter via LAN must be configured as **Slave**. The following default settings should be checked for all slave inverters:
Master/slave settings: Slave
Power limitation function: deactivated
Sensor position: Grid connection point
Activate ripple control receiver: OFF
- ✓ Inverter connected to the KOSTAL Smart Energy Meter .



1

2

3

4

5

6

7


8

9

10

3.12 Connecting central grid and system protection

Central grid and system protection with circuit breaker

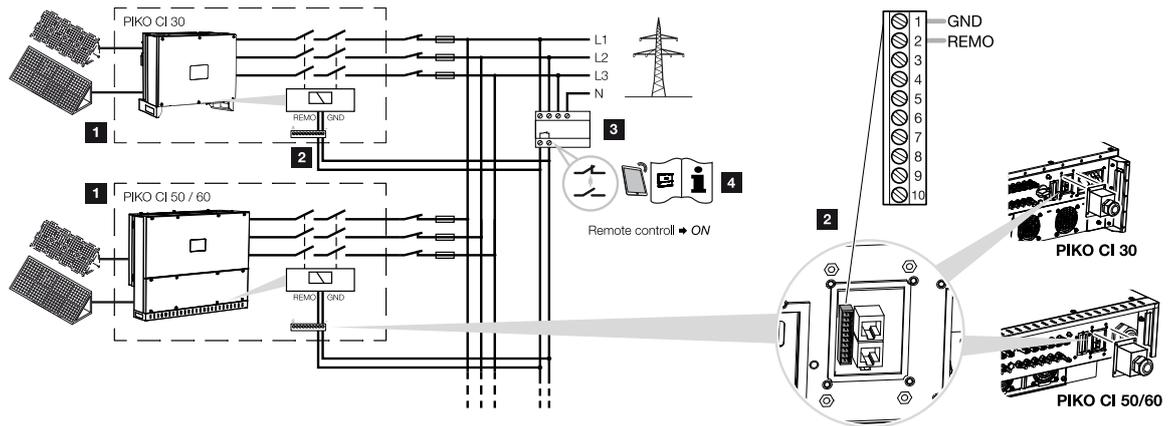

- 1 Inverter PIKO CI
- 2 Connection
- 3 Grid and system protection
Switch closed: Feed-in
Switch open: Feed-in prevented
- 4 Activate grid and system protection via KOSTAL PIKO CI app.

Central grid and system protection is required in some countries. This monitors the voltage and frequency in the grid and in the event of a fault, shuts down the photovoltaic systems by means of a circuit breaker.

If your energy supplier requires central grid and system protection for your system, install an external monitoring device, which switches off the inverter via a normally open or normally closed contact. An additional circuit breaker is not necessary because of the internal switches in the inverter.

1. De-energise the mains cable.



DANGER

Risk of death due to electrical shock and discharge!

De-energise all devices and secure them against being switched on again.

2. Mount the monitoring device in the control cabinet or power distributor.
3. Correctly route the communication cable from the inverter to the control cabinet and connect following wiring diagram provided by manufacturer.



1

2

3

4

5

6

7

8

9


10

i INFO

Requirements of communication cable:

- Wire cross-section from 0.34 to 1.5 mm² (rigid) or 0.34 to 1.0 mm² (flexible)
- Length max. 30
- Length of stripped insulation approx. 5 mm

4. Pass the communication cable through the cover for the COM2 connection panel. Seal connection with sealing ring and union nut.
5. Connect the communication cable to the plug connector for the communication interface. Please note the pin assignment. Torque: 0.2 Nm.
6. Connect plug connector on inverter to communication interface in COM2 connection panel.

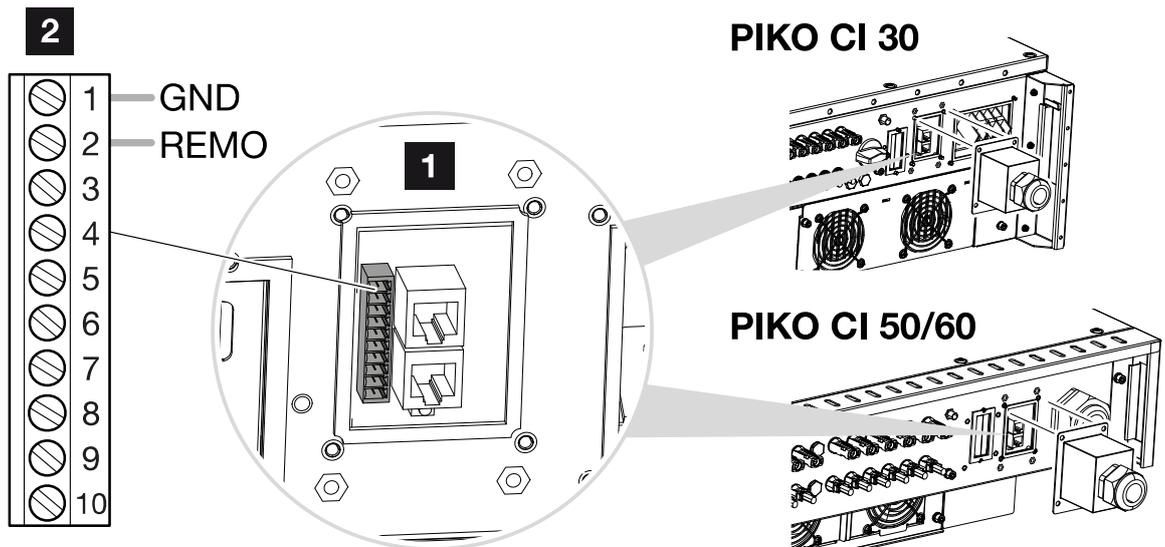

- 1 COM2 connection panel
- 2 Communication interface
- 3 Plug connector

7. After commissioning, the function must be activated in each inverter via the KOSTAL PIKO CI app. This can be activated under **Settings > Basic settings > External shutdown > ON**.
- ✓ Inverter set up for grid and system protection function.



1

2

3

4

5

6


7

8

9

10

3.13 Connecting ripple control receiver

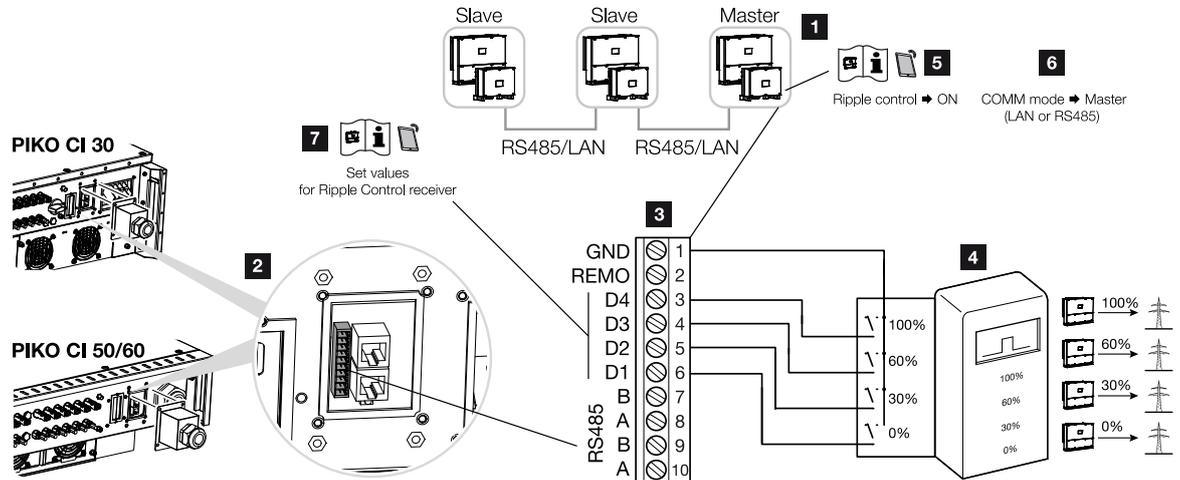

- 1 Inverter to which the ripple control receiver is connected
- 2 COM2 connection panel
- 3 Plug for communication interface
- 4 Ripple control receiver
- 5 Activate ripple control receiver in the KOSTAL PIKO CI app
- 6 Activate communication mode (LAN or RS485) in the KOSTAL PIKO CI app
- 7 Activate switching values for ripple control receivers in the KOSTAL PIKO CI app

Several energy supply companies offer the owners of PV systems the possibility of regulating their system with variable active power control and thus increasing the feed-in into the public grid to up to 100%.

i INFO

In some applications, the digital KOSTAL Smart Energy Meter may be regarded as a cost-effective alternative to the ripple control receiver. Here the feed-in may well be limited by the energy supply company, but the inverter controls the flow of energy (self-consumption in house grid and feed-in to the public grid) in such a way that the self-produced energy is not lost or loss is kept to an absolute minimum.

Ask your energy supply company or installer what application rule applies to you or whether there is an alternative (e.g. smart meter) better suited to you.

If a ripple control receiver is already connected to another KOSTAL inverter in your home network, you can use the control signals of this ripple control receiver.

- 1. De-energise the mains cable.



1

2

3

4

5

6

7

8

9

10

**DANGER****Risk of death due to electrical shock and discharge!**

De-energise all devices and secure them against being switched on again.

2. Fit ripple control receiver in control cabinet or power distributor.
3. Correctly route the communication cable from the inverter to the control cabinet and connect following wiring diagram provided by manufacturer.

**INFO**

Requirements of communication cable:

- Wire cross-section from 0.34 to 1.5 mm² (rigid) or 0.34 to 1.0 mm² (flexible)
- Length max. 30
- Length of stripped insulation approx. 5 mm

4. Pass the communication cable through the cover for the COM2 connection panel. Seal connection with sealing ring and union nut.
 5. Connect the communication cable to the plug connector for the communication interface. Please note the pin assignment.
Torque: 0.2 Nm.
 6. Connect plug connector on inverter to communication interface in COM2 connection panel.
 7. Open the KOSTAL PIKO CI app and connect to the inverter to which the ripple control receiver is connected.
 8. Activate the ripple control receiver in the KOSTAL PIKO CI app under **Settings > Inverter settings > Power adaptation/controls > Ripple control receiver (RCR) > Activate ripple control receiver > ON**.
 9. Set switching values for the ripple control receiver under **Settings > Inverter settings > Power adaptation/controls > Ripple control receiver (RCR) > RCR active power / RCR reactive power / RCR power factor**.
 10. Set the communication (LAN or RS485) on the master inverter to the other inverters under **Settings > Communication settings > Master/Slave settings > Master/Slave settings > Master**.
- ✓ The ripple control receiver is connected



1

2

3

4

5

6

7

8

9

10


3.14 Closing the inverter

1. Tighten all cable glands and check that they are properly sealed.
2. Check the fit of connected wires and braids.
3. Remove any foreign objects (tools, wire cuttings, etc.) from the inverter.
4. Mount the cover and screw it tight.
5. Mount the cover on the PIKO CI 50 / 60 and screw it tight (1.5 Nm).



3.15 Connecting PV modules

Possible PV modules

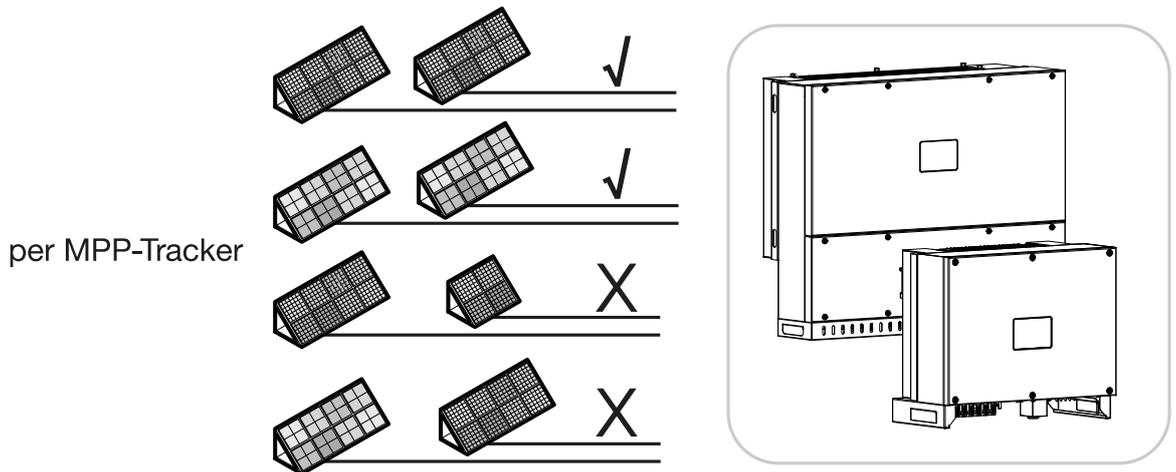

Connectable solar modules

When selecting the PV modules to be connected to PIKO CI series inverters, note the following:

- Only connect PV modules according to IEC 61730 Class A.
- Do not ground the PV cables.
- Use suitable cables with the largest possible cross-section for connecting the PV modules!

! IMPORTANT INFORMATION

Use flexible and tin-plated cables with double insulation according to EN50618.

We recommend a cross-section of 6mm². Please observe the specifications of the plug manufacturer and the technical data for the inverter.

- Per MPP tracker:
 - Only connect PV modules of the same type to an MPP tracker, i.e.:
 - same manufacturer,
 - same type,
 - same performance,
 - same size.

Different module types, sizes and connected loads and also a different number of PV modules can be connected to different MPP trackers.



Make sure that the maximum input current (I_{DCmax}) per MPPT and the maximum DC current per DC plug ($I_{Stringmax}$) are not exceeded in the process (see technical data: **Technical data, Page 132**).

Solar module connections



DANGER

Risk of death due to electrical shock and discharge!

The PV generators/cables may be live as soon as they are exposed to light.



WARNING

Serious burns due to arcs on the DC side!

During operation, dangerous arcs can occur when pulling or plugging the DC connections.

Before connecting the DC connectors, de-energise the DC side. DC switches must be in the OFF position.



WARNING

Risk of fire due to improper installation!

Incorrectly fitted plugs and sockets may heat up and cause a fire.

During installation, be sure to follow the manufacturer's requirements and manual. Properly mount plugs and sockets.

Please note the following points before connecting the PV modules:

- Our planning tool KOSTAL Solar Plan should be used to optimally configure the solar modules and achieve the highest possible yields.
- Check the planning and the wiring of the modules for plausibility.
- Measure and record the DC idling voltage and polarity of the PV modules. The idling voltage of the PV modules must be in the voltage range between $U_{DCstart}$ and U_{DCmax} .

PIKO CI	$U_{DCstart}$	U_{DCmax}
30	$\geq 250 \text{ V}$	$\leq 1000 \text{ V}$
50/60	$\geq 250 \text{ V}$	$\leq 1000 \text{ V}$

- Make sure that the maximum short-circuit current of the PV modules is less than the permitted value.
- Make sure that the PV modules are not short-circuited.



1

2

3

4

5

6

7

8

9

10

- Make sure that the inverter is closed when the PV modules are connected.
- Make sure that when connecting several inverters there is no cross-connection of the PV modules.

Failure to observe these requirements will render any warranty, guarantee or other liability offered by the manufacturer null and void.

Preparing PV connector

The PIKO CI inverters use Helios H4 plug connectors from Amphenol.

- During installation, it is essential that the current specifications of the manufacturer are observed.
Information about the Amphenol installation specification is available from:
www.amphenol.com
- Only use installation tools from the manufacturer.
- When mounting the sockets and plugs, ensure that the solar modules have the correct polarity.

Installing PV plug connectors



DANGER

Risk of death due to electrical shock and discharge!

Disconnect the DC cables by interrupting the connections to the PV modules.


If it is not possible to disconnect the DC cables, observe the rules for working under voltage.

Use personal protective equipment, hard hat, visor or goggles, protective suit, insulating gloves.

Use an insulating protective mat as an underlay.

Only use insulated tools.

1. Strip approx. 9 mm of insulation off the solar cable.

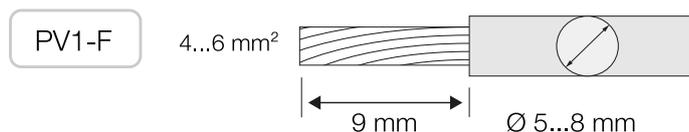

2. Insert stripped wire end into crimped neck of contact.



1

2

3

4

5


6

7


8

9

10

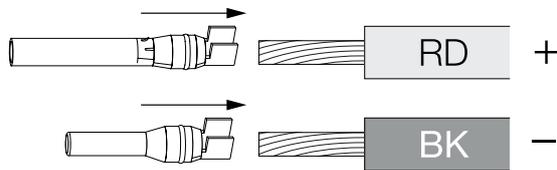


3. Crimp the contact with a suitable crimping tool.

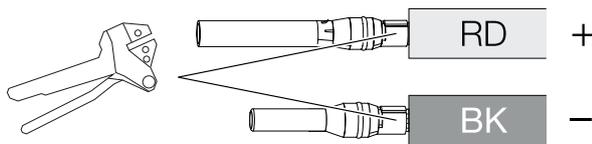


4. Insert contact into plug connector until the contact clicks into place tangibly and audibly.

i INFO

Once snapped into the housing, the contact cannot be removed from the plug connector.

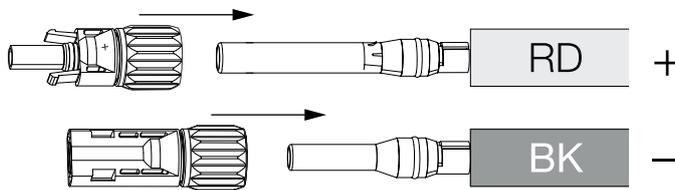

5. Tighten nut on plug connector (3 Nm).

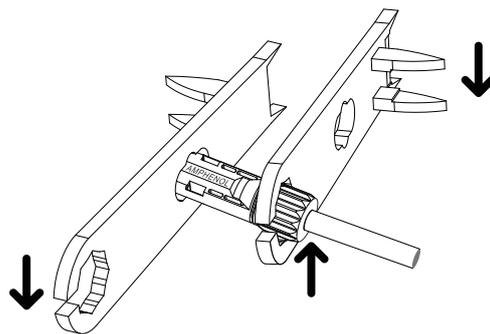

✓ PV connector installed

Selecting PV inputs

If the inverter's DC inputs are not fully occupied, distribute the input assignment in accordance with the following tables: Make sure that the maximum input current (I_{DCmax}) per MPPT and the maximum DC current per DC input ($I_{Stringmax}$) are not exceeded in the process:

**i** INFO

Only connect PV modules of the same type to an MPP tracker, i.e.:

- same manufacturer,
- same type,
- same performance,
- same size.

The following tables apply from article number:

- PIKO CI 30: 10534223
- PIKO CI 50: 10534084
- PIKO CI 60: 10534085

Maximum input current

PIKO CI	U_{DCmax}	I_{DCmax} per MPP tracker	$I_{Stringmax}$
30	≤ 1000 V	\leq DC 1-3: 40.5 A \leq DC 4-6: 40.5 A	≤ 14 A
50/60	≤ 1100 V	\leq DC 2-4: 39 A \leq DC 6-8: 39 A \leq DC 10-11: 26 A \leq DC 13-14: 26 A	≤ 18 A
50/60	≤ 1100 V	\leq DC 2-4: 39 A \leq DC 6-8: 39 A \leq DC 9-11: 39 A \leq DC 12-14: 39 A	≤ 18 A

DC connection assignment for PIKO CI 30 with article number 10534223

PIKO CI	Connected PV strings	MPP trackers	
		1	2
		Used DC input	
30	1	1...6	
	2	1	4

PIKO CI	Connected PV strings	MPP trackers	
		1	2
		Used DC input	
	3	1, 2	4
	4	1, 2	4, 5
	5	1, 2, 3 ⁽¹⁾	4, 5
	6	1, 2, 3 ⁽¹⁾	4, 5, 6 ⁽¹⁾

⁽¹⁾ With 3 DC strings connected, $I_{\text{Stringmax}} \leq 13.5$ A per DC input.

DC connection assignment for PIKO CI 50 with article number 10534084 and PIKO CI 60 with article number 10534085

PIKO CI	Connected PV strings	MPP trackers			
		1	2	3	4
		Used DC input			
50/60	1	2...10/12			
	2	2	6		
	3	2	6	10	
	4	2	6	10	13
	5	2, 3	6	10	13
	6	2, 3	6, 7	10	13
	7	2, 3	6, 7	10, 11 ⁽²⁾	13
	8	2, 3	6, 7	10, 11 ⁽²⁾	13, 14 ⁽²⁾
	9	2, 3, 4 ⁽¹⁾	6, 7	10, 11 ⁽²⁾	13, 14 ⁽²⁾
	10	2, 3, 4 ⁽¹⁾	6, 7, 8 ⁽¹⁾	10, 11 ⁽²⁾	13, 14 ⁽²⁾
60	11	2, 3, 4 ⁽¹⁾	6, 7, 8 ⁽¹⁾	9, 10, 11 ⁽¹⁾	12, 13 ⁽²⁾
	12	2, 3, 4 ⁽¹⁾	6, 7, 8 ⁽¹⁾	9, 10, 11 ⁽¹⁾	12, 13, 14 ⁽¹⁾

⁽¹⁾ With 3 DC strings connected, $I_{\text{Stringmax}} \leq 13$ A per DC input.
⁽²⁾ If 2 DC strings are connected to the PIKO CI 50, then $I_{\text{Stringmax}}$ must be ≤ 13 A per DC input.

The following tables apply to article numbers:

- PIKO CI 30: 10523267



1

2

3

4

5

6

7

8

9

10

- PIKO CI 50: 10523268
- PIKO CI 60: 10523269

Maximum input current

PIKO CI	U_{DCmax}	I_{DCmax} per MPP tracker	$I_{Stringmax}$
30	$\leq 1000\text{ V}$	\leq DC 1-3: 37.5 A \leq DC 4-6: 37.5 A	$\leq 14\text{ A}$
50/60	$\leq 1100\text{ V}$	\leq DC 2-4: 33 A \leq DC 6-8: 33 A \leq DC 10-11: 22 A \leq DC 13-14: 22 A	$\leq 14\text{ A}$
50/60	$\leq 1100\text{ V}$	\leq DC 2-4: 33 A \leq DC 6-8: 33 A \leq DC 9-11: 33 A \leq DC 12-14: 33 A	$\leq 14\text{ A}$

DC connection assignment for PIKO CI 30 with article number 10523267

PIKO CI	Connected PV strings	MPP trackers	
		1	2
		Used DC input	
30	1	1...6	
	2	1	4
	3	1, 2	4
	4	1, 2	4, 5
	5	1, 2, 3 ⁽¹⁾	4, 5
	6	1, 2, 3 ⁽¹⁾	4, 5, 6 ⁽¹⁾

⁽¹⁾ With 3 DC strings connected, $I_{Stringmax} \leq 12.5\text{ A}$ per DC input.



1

2

3

4

5

6

7

8

9

10

DC connection assignment for PIKO CI 50 with article number 10523268 and PIKO CI 60 with article number 10523269

PIKO CI	Connected PV strings	MPP trackers			
		1	2	3	4
Used DC input					
50/60	1	2...10/12			
	2	2	6		
	3	2	6	10	
	4	2	6	10	13
	5	2, 3	6	10	13
	6	2, 3	6, 7	10	13
	7	2, 3	6, 7	10, 11 ⁽²⁾	13
	8	2, 3	6, 7	10, 11 ⁽²⁾	13, 14 ⁽²⁾
	9	2, 3, 4 ⁽¹⁾	6, 7	10, 11 ⁽²⁾	13, 14 ⁽²⁾
	10	2, 3, 4 ⁽¹⁾	6, 7, 8 ⁽¹⁾	10, 11 ⁽²⁾	13, 14 ⁽²⁾
60	11	2, 3, 4 ⁽¹⁾	6, 7, 8 ⁽¹⁾	9, 10, 11 ⁽¹⁾	12, 13 ⁽²⁾
	12	2, 3, 4 ⁽¹⁾	6, 7, 8 ⁽¹⁾	9, 10, 11 ⁽¹⁾	12, 13, 14 ⁽¹⁾

⁽¹⁾ With 3 DC strings connected, $I_{\text{stringmax}} \leq 11$ A per DC input.

⁽²⁾ If 2 DC strings are connected to the PIKO CI 50, then $I_{\text{stringmax}}$ must be ≤ 11 A per DC input.

Connecting PV modules to the inverter

The DC cables of the solar modules must not be connected to the inverter under load.



DANGER

Risk of death due to electrical shock and discharge!

Switch off the inverter on both the AC and DC sides.


1. Unlock the AC connection of the inverter by switching off the line circuit breaker.
2. Turn the DC switch on the inverter to "OFF".
3. Before connecting, check polarity of DC cables.



i INFO

Observe national regulations! In France, in particular, the inverter and the supply lines must be labelled, for example.

The installer is responsible for obtaining and affixing the prescribed markings.

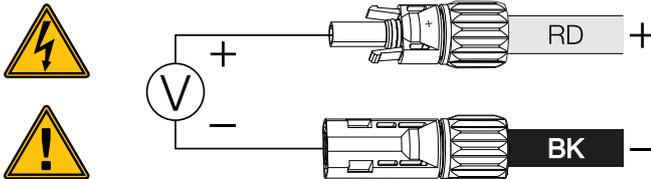

	$U_{DCstart}$	U_{DCmax}
PIKO CI 30	$\geq 250 \text{ V}$	$\leq 1000 \text{ V}$
PIKO CI 50/60	$\geq 250 \text{ V}$	$\leq 1100 \text{ V}$


4. Remove protective caps from input terminals.

i INFO



Keep the protective caps of the PV connections for future use.

5. Fit plug connectors of the individual PV strings into the DC inputs PV+ and PV- in pairs until they engage tangibly and audibly.

PIKO CI 30

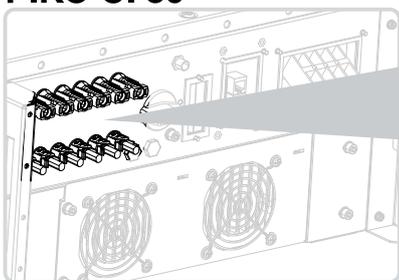

PIKO CI 50/60

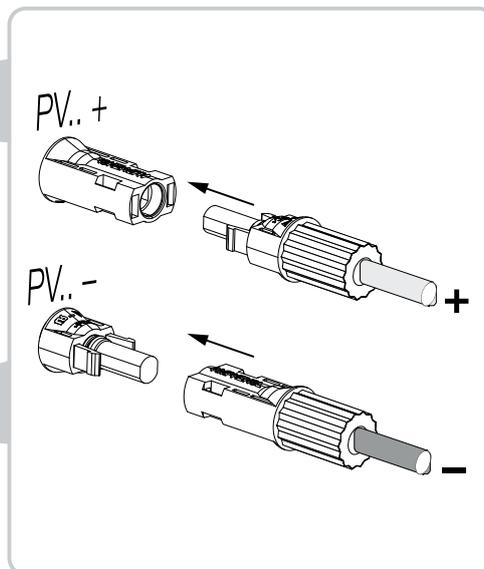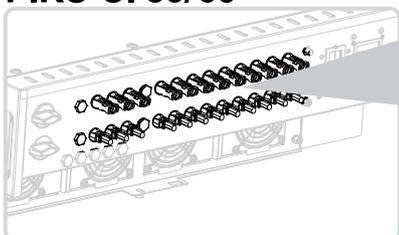

- ✓ The PV modules are connected.



1

2

3

4

5

6

7

8

9

10

3.16 Initial commissioning

Commissioning and setting the necessary operating parameters is undertaken wirelessly using the KOSTAL PIKO CI app and a tablet or your smartphone.

Installing KOSTAL PIKO CI app

1. Download the app from the Apple App Store or Google Play Store onto your tablet or smartphone.



Connecting inverter to app

1. Turn on the WiFi/WLAN function on your tablet or smartphone.
2. Call up the WiFi/WLAN settings.
3. Switch on the inverter.
4. Make a note of the type and serial number of the inverter you want to start up. This information can be found on the type plate.
5. On your tablet or smartphone, find and select the WLAN network of your inverter. The inverter's SSID is composed of the type and serial number of the inverter. Example: PIKO_CI_50_12345678

i INFO

If there are a lot of metal parts in the installation environment of the inverter – e.g. support frames, connecting cables, enclosures – the range of the radio connection may be impaired. Change position if you experience connection problems.

6. Enter as password: **12345678** and confirm your entry.

i INFO

The default password is: **12345678**. This should be changed after the initial commissioning.

If you have forgotten the WLAN password, you can reset it to the default value using the reset button under the cover for COM2.



1

2

3

4

5

6

7

8

9

10

7. Answer yes when asked if you want to remain permanently connected to the network.

INFO

The question does not always appear and depends on the smartphone/tablet's operating system.

8. Launch the app.
 - The app displays the discovered inverters.
9. Select the inverter you want to start up.
 - ✓ When the app displays the message **Connect**, the inverter is connected.

Procedure for initial commissioning

INFO

The installation process may vary depending upon the software version of the inverter.

Information about the menus:  **KOSTAL PIKO CI app - menu structure, Page 95**

1. In the app, select the Settings page.
 - On the **Settings** page, the app shows you various menus where you can configure settings.
2. In order to have access to all relevant settings, go to the **User Management** menu item and then select **Change user**.
3. Enter the password **superadmin** and select **Log in as installer**.

INFO

The default password for the installer is **superadmin**.

With this user, a variety of settings can be configured vis-à-vis the system operator, such as network settings, power limitations or grid guidelines.

This password should be changed after the initial commissioning.

4. Configure the settings for inverter operation and on the **Settings** page, select **Inverter settings**.



1

2

3

4

5

6

7

8

9

10

i INFO

Observe national regulations! In France, in particular, the inverter and the supply lines must be labelled, for example.

The installer is responsible for obtaining and affixing the prescribed markings.

- ✓ The inverter is in operation and can now be used. Initial commissioning is completed.

The following settings still need to be configured after initial commissioning:

- Inverter settings made by the installer
- Prescribed settings for grid feed-in by the energy supply company
- Change the password or update the inverter software.




4. Operation and operating the device

4.1	Switching on the inverter	79
4.2	Switching off the inverter	81
4.3	De-energising the inverter	82
4.4	Operational statuses of inverter	85
4.5	Status LEDs.....	86
4.6	Status display via app	88

4.1 Switching on the inverter

1. Activate supply voltage via the line circuit breaker.

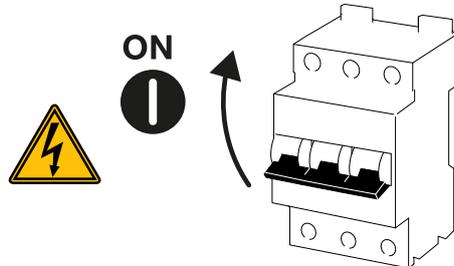


2. Move the DC switch on the inverter to **ON**.

i INFO

As soon as one of the two DC switches on the PIKO CI 50/60 is set to **ON**, the inverter starts up.

The DC switch SW1 switches the DC inputs DC2-8. **☑ Block diagrams, Page 135**

The DC switch SW2 switches the DC inputs DC10-16. **☑ Block diagrams, Page 135**

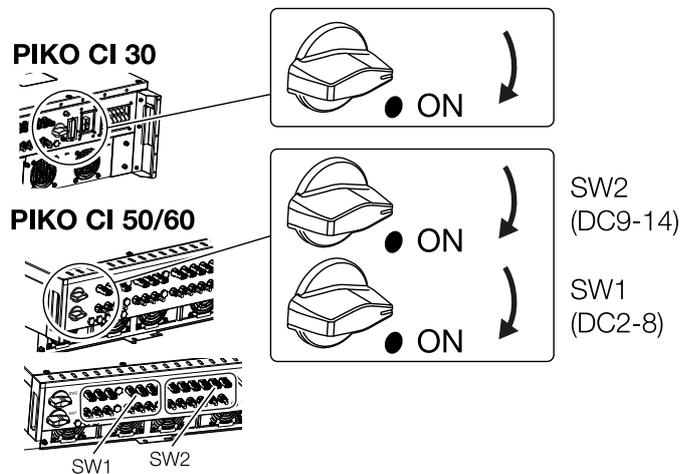

- The inverter starts up.
- The LEDs light up briefly during start-up.
- After startup, the LEDs indicate the operational status of the inverter.



1

2

3

4

5

6

7

8

9

10

INFO

When the inverter is commissioned for the first time, it goes into the **Off (Shutdown)** status.

When this happens, first carry out initial commissioning.

- ✓ The inverter is in operation.


4.2 Switching off the inverter

i INFO


For maintenance work on the inverter, disconnect the device completely. **☑ De-energising the inverter, Page 82**

To switch off the inverter, carry out the following steps:

1. Switch off line circuit breaker.

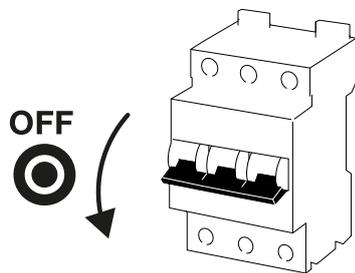

2. Switch the DC switch on the inverter to **OFF**.

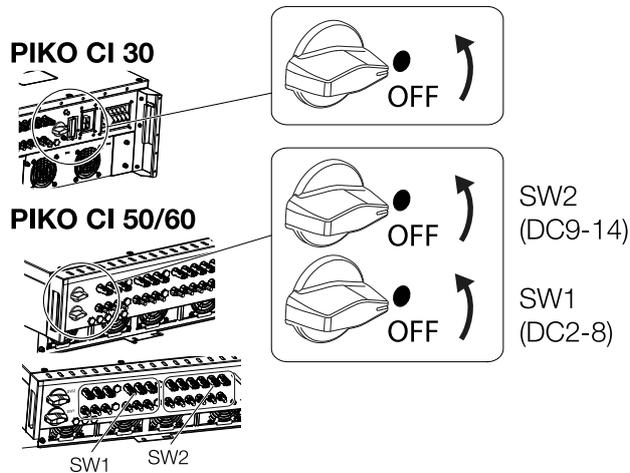

- ✓ The inverter is switched off.

The inverter remains energised and monitoring is still performed.


4.3 De-energising the inverter

For maintenance work on the inverter, especially on the connections, the inverter must be disconnected from the power supply.


- For work on the AC side, e.g. on the energy meter, the earthing system or the communication connections, it is sufficient to disconnect the AC connection.
- For work on the PV modules or the DC feed lines, disconnect the DC connections.
- When working in the terminal compartment of the inverter, the inverter must be completely voltage-free on the AC and DC sides.

Disconnecting inverter on the AC side

1. Switch off AC line circuit breaker and secure it against being switched on again.

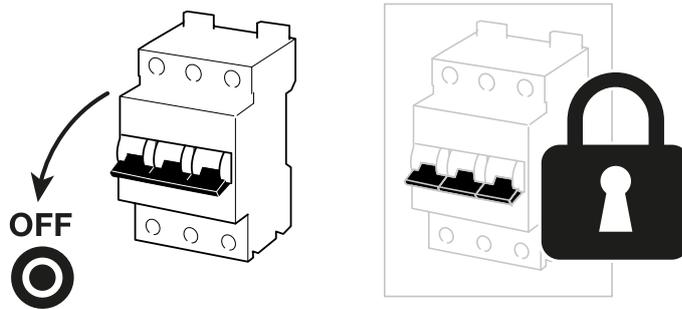

2. Switch DC switch on inverter to **OFF** and secure it against being switched on again.

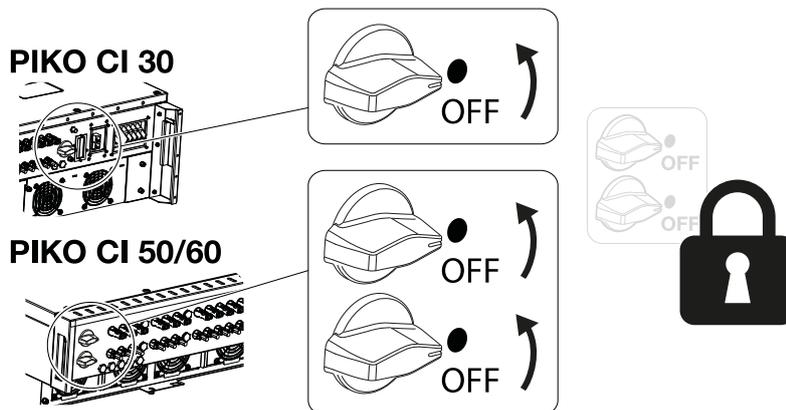

- ✓ The inverter is voltage-free on the AC side.

Disconnecting DC cables

The inverter must first be de-energised on the AC side. Then all DC connections on the inverter can be disconnected. You will need the disassembly tool supplied with the device.



1

2

3

4

5

6

7

8

9

10



DANGER

Risk of death due to electrical shock and discharge!

When working in the terminal compartment, on the DC supply lines or on the PV modules, the DC cables must still be disconnected.


1. De-energise all devices and secure them against being switched on again.



INFO

PV generators/cables may be live as soon as they are exposed to light.

2. Disconnect the DC cables by interrupting the connections to the PV modules.
If it is not possible to disconnect the DC cables, observe the rules for working under voltage:
 - Use personal protective equipment, hard hat, visor or goggles, protective suit, insulating gloves.
 - Use an insulating protective mat as an underlay.
3. Insert the disassembly tool into the plug's side release openings so that the plug is unlocked and separated from the socket by approx. 1.5 mm.

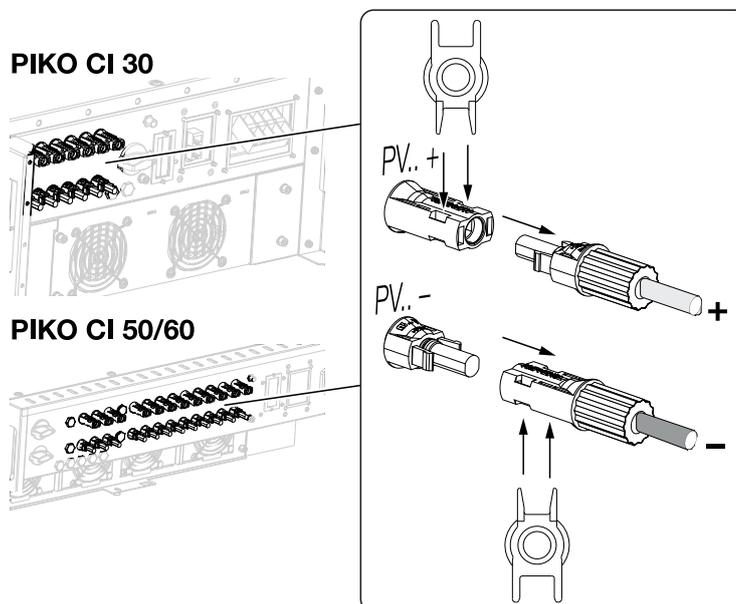

4. Remove plug from the socket.
5. Ensure that the disconnected DC cables are protected against both weather (rain) and unauthorized access.
6. Check that all connections on the inverter are voltage-free.



1

2

3

4

5

6

7

8

9

10

7. Wait at least 10 minutes before carrying out any further work on the inverter so that the capacitors contained in it can discharge.
- ✓ The inverter is isolated on the DC side and voltage-free.



1

2

3

4

5

6

7

8

9


10

4.4 Operational statuses of inverter

After switching on, the inverter is always in one of the following operational statuses:

Operational status	Description
Standby	<p>The connected PV modules are not supplying enough energy to feed it into the power grid.</p> <p>As soon as the required conditions are met, the inverter switches to the Feed in status.</p>
Feed in	<p>The inverter is generating electrical energy and feeding it into the connected power grid.</p>
Off (Shutdown)	<p>The inverter is switched off due to a switch-off command or an error that has occurred.</p> <p>As soon as the inverter receives a power-up command or the error is corrected, the inverter switches to the Standby status.</p>

4.5 Status LEDs

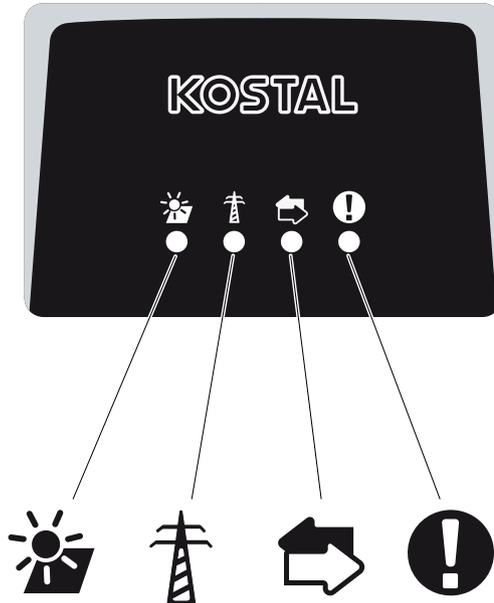

The LEDs on the front indicate the current operational status.

Further status information can be read with the help of the KOSTAL PIKO CI app or via the KOSTAL Solar Portal.

Measures to rectify events can be found in the chapter **Event codes, Page 125**.

Meaning	State	Description
 PV inputs	Lights up	The input voltage is within the operating range
	Flashes	Overvoltage/undervoltage
 Feed-in	Off	The inverter does not feed in
	Lights up	The inverter feeds energy into the grid. Every 30 seconds the inverter reports its current power: flashes once: < 20 % Flashes twice: < 40 % Flashes 3x: < 60 % Flashes 4x: < 80 % Flashes 5x: < 100 %
	Continuous flashing	The state of the power grid does not allow any feed-in.



1

2

3

4

5

6

7

8

9

10

Meaning		State	Description
	Communication	Off	No connection active or no communication
		Flashes	The inverter is communicating with another device.
	Fault	Off	No fault
		Lights up or flashes	A fault has occurred



1

2

3

4

5

6

7

8

9

10

4.6 Status display via app

The smartphone app KOSTAL PIKO CI displays the current operational status, the power output and the current measuring values from inverter operation.



INFO

The user interface in the app depends on the installed firmware (FW) and version of the app used and may differ from the description here.

App area Home page > Operational status



- 1 Current operational status
- 2 Connection status to the router
- 3 Energy generated
- 4 Current measuring values
- 5 Selection of the **Home** page
- 6 Selection of the **Settings** page

Further information on the KOSTAL PIKO CI app: [KOSTAL PIKO CI App, Page 90.](#)



1

2

3

4

5

6

7

8

9

10

5. KOSTAL PIKO CI App

5.1	KOSTAL PIKO CI App.....	90
5.2	Installation of the KOSTAL PIKO CI app	91
5.3	Connecting inverters with KOSTAL PIKO CI app	92
5.4	Logging in as an installer	94
5.5	KOSTAL PIKO CI app - menu structure	95
5.6	KOSTAL PIKO CI app - menu description	100



5.1 KOSTAL PIKO CI App

The KOSTAL PIKO CI app, which is available free of charge, provides a graphical user interface.

The app is used to commission and configure the inverter and to display its status:

- Log in on inverter
- Update inverter firmware
- Log in as user or administrator
- Status request
- Current feed-in values at grid connection
- Display of the log data
- Inverter version display
- Inverter configuration
(e.g. LAN connection, setting up the energy meter, etc.)



1

2

3

4

5

6

7

8

9

10

5.2 Installation of the KOSTAL PIKO CI app



Download the app from the Apple App Store or Google Play Store onto your tablet or smartphone and install it.



1

2

3

4

5

6

7

8

9

10

5.3 Connecting inverters with KOSTAL PIKO CI app

The app is opened and launched via a smartphone or tablet. To do this, the smartphone or tablet must be within range of the inverter's WiFi wireless network.

1. Turn on the WiFi/WLAN function on your tablet or smartphone.
2. Call up the WiFi/WLAN settings.
3. Switch on the inverter.
4. Make a note of the type and serial number of the inverter you want to start up. This information can be found on the type plate.
5. On your tablet or smartphone, find and select the WLAN network of your inverter. The inverter's SSID is composed of the type and serial number of the inverter.
Example: PIKO_CI_50_12345678



INFO

If there are a lot of metal parts in the installation environment of the inverter – e.g. support frames, connecting cables, enclosures – the range of the radio connection may be impaired. Change position if you experience connection problems.

6. Enter as password: **12345678** and confirm your entry.



INFO

The default password is: **12345678**. This should be changed after the initial commissioning.

If you have forgotten the WLAN password, you can reset it to the default value using the reset button under the cover for COM2.

7. Answer the **Check** question with **Stay**.



INFO

The question does not always appear and depends on the smartphone/tablet's operating system.

8. Launch the app.
 - The app displays the inverter connected to the WLAN network of the tablet or smartphone.



1

2

3

4

5

6

7

8

9

10

9. Select the inverter to establish the connection.
- ✓ When the app displays the message **Connect**, the inverter is connected.



1

2

3

4

5

6

7

8

9

10

5.4 Logging in as an installer

Once the app is connected to an inverter, you can see all the values. However, some settings can only be changed by an administrator. This requires a change of user.

To do this, proceed as follows:

1. In the app, select the **Settings** page.
 - On the **Settings** page, the app shows you various menus where you can configure settings.
2. In order to have access to all relevant settings, go to **User management** and then touch the **Change user** button.
3. Enter the password for the installer and select **Log in as Installer**. If a new password has not yet been assigned, the default password for the installer is **superadmin**.



INFO

The default password for the installer is **superadmin**.

With this user, a variety of settings can be configured vis-à-vis the system operator, such as network settings, power limitations or grid guidelines.

This password should be changed after the initial commissioning.

- ✓ You are now logged in as an installer.

Configuring settings

Now configure the settings of the inverter as required.



1

2

3

4

5

6

7

8

9

10

5.5 KOSTAL PIKO CI app - menu structure

Deviations due to software versions are possible.

Event messages

Level 1

Event messages information

Generation

Level 1

Day/month/year energy

Basic settings

Level 1

Basic information

Type

Serial number

Firmware version

Internal code

Modbus version

Communication board version

Update CSB firmware

Update CB firmware

Operation

Switch on the inverter

Switch off the inverter

Reset to factory settings

Activate external shutdown

Data management

Export event messages

Export generation data

Export configuration

Configuration import

About

Level 1	
<i>App version</i>	

User management

Level 1	Level 2
<i>Change user</i>	Log in as installer
	Log in as system operator
	Forgotten installer password (reset)
<i>Change installer password for login</i> (only possible by installer)	

Communication settings

Level 1	Level 2
<i>WLAN settings</i>	<i>WLAN IP</i>
	<i>Select WLAN connection</i>
	<i>Change local WLAN password</i>
<i>LAN settings</i>	<i>IP mode</i>
	<i>IP address</i>
	<i>Subnet mask</i>
	<i>Router/gateway</i>
	<i>Auto DNS</i>
	<i>DNS server 1</i>
	<i>DNS server 2</i>
<i>RS485 settings</i>	<i>Baud rate</i>
	<i>Data bit</i>
	<i>Stop bit</i>
	<i>Parity bit</i>
	<i>Terminating resistor</i>
	<i>Modbus address</i>
<i>Master/slave settings</i>	<i>Master/slave settings</i>

Inverter settings

Level 1	Level 2	Level 3
<i>Time setting</i>	<i>Synchronize inverter time</i>	

Level 1	Level 2	Level 3
Grid settings	<i>Frequency monitoring of level 1 activated</i>	
	<i>PV string monitoring</i>	
	<i>Grid guideline</i>	
	<i>Start up time (s)</i>	
	<i>Start up time following grid error (s)</i>	
	<i>Power gradient (%/min)</i>	
	<i>Power gradient following grid error (%/min)</i>	
	<i>Overfrequency limit value x (Hz)</i>	
	<i>Underfrequency limit value x (Hz)</i>	
	<i>Overvoltage limit value x (V)</i>	
	<i>Undervoltage limit value x (V)</i>	
	<i>Overfrequency switch-off time x time (s)</i>	
	<i>Underfrequency switch-off time x time (s)</i>	
	<i>Overvoltage switch-off time x time (s)</i>	
	<i>Undervoltage switch-off time x time (s)</i>	
	<i>Max. grid start voltage (V)</i>	
	<i>Min. grid start voltage (V)</i>	
	<i>Max. grid start frequency (Hz)</i>	
	<i>Min. grid start frequency (Hz)</i>	
<i>Moving average</i>		
Power adaptation/controls	<i>Active power control</i>	<i>P(U) regulation</i>
		<i>P(F) regulation</i>
		<i>Power gradient (%/s)</i>

Level 1	Level 2	Level 3
		<i>Maximum active power (%)</i> <i>Maximum feed-in capacity (W)</i> With P(U) regulation active <i>P(U) start voltage node x (V)</i> <i>P(U) power gradient node x Power (%)</i> <i>P(U) set time (S)</i> With P(F) regulation active <i>P(f) overfrequency gradient (%)</i> <i>Activation frequency (Hz)</i> <i>Deactivation frequency (Hz)</i> <i>P(f) underfrequency gradient (%)</i>
	<i>Reactive power control</i>	<i>Settling time of reactive power</i> <i>Reactive power mode</i>
	<i>Energy management</i>	<i>Power limitation function</i> <i>Sensor position</i> <i>Modbus address of energy meter</i> <i>Limitation of the active power to (W)</i> <i>IP address of energy meter</i> <i>L1-3 grid power</i> <i>Total energy</i> <i>Total feed-in energy</i> <i>L1-3 consumer power</i> <i>Total consumption</i> <i>L1-3 inverter output</i> <i>Total inverter output</i>
	<i>Ripple control receiver (RCR)</i>	<i>Activate ripple control receiver</i> <i>RCR active power (%)</i> <i>RCR reactive power (%) / power factor cos phi</i>
<i>Other settings</i>	<i>Isolated network detection</i>	



1

2

3

4

5

6

7

8

9

10

Level 1	Level 2	Level 3
	<i>Residual current monitoring</i>	
	<i>Type A RCD compatible</i>	
	<i>Shadow management</i>	
	<i>Shadow management interval time (s)</i>	
	<i>Insulation resistance (kOhm)</i>	
	<i>Leakage current limit (mA)</i>	
	<i>Limit for unbalanced voltage (%)</i>	
	<i>Dynamic grid support (FRT = Fault Ride Through)</i>	<i>Positive sequence K factor</i> <i>Negative sequence K factor</i> <i>Monitoring of supply voltage</i> <i>Undervoltage ride through (V) UVRT</i> <i>Overvoltage ride through (V) OVRT</i> <i>Grid support mode</i> <i>Limited grid support (%)</i> <i>Irregular voltage change (%)</i>
	<i>Overvoltage protection monitoring</i>	



1

2

3

4

5

6

7

8

9

10

5.6 KOSTAL PIKO CI app - menu description

The following menus are available to the user in the KOSTAL PIKO CI app.

Parameter	Explanation
START	Connect the smartphone/tablet to the inverter's WLAN.
DOWNLOAD UPDATE FILES	Download the update files from the server. These are stored on the smartphone/tablet in the KOSTAL PIKO CI folder. To do this, the smartphone/tablet must not be connected to the inverter's WLAN. Otherwise, there is no Internet connection.



1

2

3

4

5

6

7

8

9

10

Home page

On the home page, the user is shown a status overview for the inverter. This includes:

- Inverter status
- WLAN connection status between router and inverter
- Event messages
- Performance diagram
- Current measuring values

Parameter	Explanation
Power limitation status	Status / current power limitation
Status of ripple control receiver (RCR)	Status / current setting of the ripple control receiver (RCD)
External shutdown status	Status of the central grid and system protection
Power reduction status	Status / current power reduction
Current power	Measuring value of the electrical power currently being generated in kilowatts (kW)
Today's yield	Measuring value of the energy generated on the current date in kilowatt hours (kWh)
Total yield	Measuring value of the energy generated up to the current date
Maximum power	Measuring value of the highest generated power up to the current date (kW)
Temperature	Current ambient temperature of the inverter
MPPTx voltage	Measuring value of the current input voltage of PV groups 1 to 4
MPPTx current	Measuring value of the current input current of PV groups 1 to 4
Output voltage Lx-Ly	Voltage of phases L1-L3
Output current Lx	Current of phases L1-L3
Power factor	Power factor ($\cos\phi$) of the currently delivered electrical power
Grid frequency	Output frequency of the alternating current currently being generated
Active power	Measuring value of the active power currently being generated
Reactive power	Measuring value of the reactive power currently being generated



Settings

This menu item can be used to retrieve inverter data and configure the inverter. These include:

- Inverter messages/events
- Generation data
- Basic information/settings
(e.g. device information, reset inverter to factory settings, export log data)
- Access management
(user management, change password)
- Communication setting
(e.g. Ethernet (LAN)/WLAN/WiFi/RS485 settings)
- Inverter setting
(e.g. time/date, grid guideline, etc.)

Event messages

Parameter	Explanation
<i>Event messages information</i>	Display of events in the inverter. Further information about the events and possible error rectification:  Event codes, Page 125.

Generation

Parameter	Explanation
<i>Day/month/year energy</i>	Indication of energy generated in diagram form for day/month/year.



1

2

3

4

5

6

7

8

9

10

Basic settings

Basic information	Explanation
Type	Inverter model.
Serial number	Inverter serial number.
Firmware version	Inverter safety firmware version. Contains the safety, open and shutdown functions required for appliance safety and grid service functions.
Internal code	Controller board (CB) firmware version
Modbus version	Modbus version used in the inverter.
Communication board version	Communication board firmware version
Update CSB firmware	Update the firmware for the communication board (CSB). The firmware must be downloaded beforehand via the Download Updates Files button on the start screen.
Update CB firmware	Update the firmware for the controller board (CB). The firmware must be downloaded beforehand via the Download Updates Files button on the start screen.

Operation	Explanation
Switch on the inverter	Switch on the inverter.
Switch off the inverter	Switch off the inverter.
Reset to factory settings	Reset the inverter parameters to factory settings.
Activate external shutdown	Activate central grid and system protection monitoring in the inverter. Further information  KOSTAL PIKO CI App, Page 90.

Data management	Explanation
Export event messages	Export log data (event messages/generation data/configuration data of the inverter)  Retrieving log data, Page 114. These are stored in the root directory on the smartphone.
Export generation data	
Export configuration	
Configuration import	Import configuration data of inverter.



1

2

3

4

5

6

7

8

9

10

About	Explanation
<i>App version</i>	Version of the KOSTAL PIKO CI app.



1

2

3

4

5

6

7

8

9

10

User management

Parameter	Explanation
Change user	Change of user (<i>installer</i> or <i>system operator</i>).
Change installer password for login	Change <i>installer</i> password. By default, the password is <i>superadmin</i> .

Communication settings

WLAN settings	Explanation
WLAN IP	WLAN IP address of the inverter WiFi module.
Select WLAN connection	Selection of WLAN router with password (connection of inverter to WLAN router).
Change local WLAN password	Change the inverter's WLAN password. By default this is 12345678

LAN settings	Explanation
IP mode	The option Automatically acquire IP address is activated by default. This means that the inverter obtains its IP address from a DHCP server.
IP address	Enter IP address of inverter. If the inverter is not allocated an IP address automatically through a DHCP server, the inverter can be configured manually. The data necessary for configuration, such as IP, subnet mask, router and DNS addresses, can be found on your router/gateway.
Subnet mask	Enter the subnet mask e.g. 255.255.255.0
Router/gateway	Enter the IP address of the router/gateway
Auto DNS	The Auto DNS option is activated by default. This means that inverters can also be addressed using a name instead of an IP address. For this purpose, the IP addresses of the DNS servers must be entered.
DNS server 1	Enter the IP address of the DNS server (Domain Name System)
DNS server 2	Enter the IP address of the backup DNS server (Domain Name System)



1

2

3

4

5

6

7

8

9

10

RS485 settings	Explanation
Baud rate	RS485 transmission rate
Data bit	RS485 data bit
Stop bit	RS485 stop bit
Parity bit	RS485 parity bit
Terminating resistor	Activate terminating resistor for the RS485 bus. This must be activated on the last inverter connected to the RS485 bus.
Modbus address	Modbus address

Master/slave settings	Explanation
Master/slave settings	Select whether the inverter should act as a master (LAN or RS485) or slave. If set as master inverter, information or setting parameters (e.g. during power reduction) are sent to the slave inverters.



1

2

3

4

5

6

7

8

9

10

Inverter settings

Time setting	Explanation
<i>Synchronize inverter time</i>	Synchronize the time of the inverter with the time of the smartphone.

The following menu items can be used to set the parameters in the inverter, which are specified by the grid operator. Parameters may only be changed on the inverter by qualified electricians who are familiar with the system and at the request of the grid operator. Inappropriate settings can be hazardous and lead to injury or even death of the user or third parties. Material damage to the device and other equipment can also occur.

Grid settings	Explanation
<i>Frequency monitoring of level 1 activated</i>	Activate/deactivate frequency monitoring level 1
<i>PV string monitoring</i>	If the function is activated, one value per PV string is displayed on the home page. In addition, an event is output if the polarity of the PV string is reversed.
<i>Grid guideline</i>	Select grid guideline (e.g. VDE-AR-N 4105)
<i>Start up time (s)</i>	Start-up waiting time after switching on the inverter
<i>Start up time following grid error (s)</i>	Start-up time following inverter grid error
<i>Power gradient (%/min)</i>	Power gradient after switching on the inverter
<i>Power gradient following grid error (%/min)</i>	Power gradient after grid error of the inverter
<i>Overfrequency limit value x (Hz)</i>	Set overfrequency limit threshold value
<i>Underfrequency limit value x (Hz)</i>	Set underfrequency protection threshold value
<i>Overvoltage limit value x (V)</i>	Set overvoltage protection limit value
<i>Undervoltage limit value x (V)</i>	Set undervoltage protection limit value
<i>Overfrequency switch-off time x time (s)</i>	Set overfrequency switch-off time
<i>Underfrequency switch-off time x time (s)</i>	Set underfrequency shut-off time
<i>Overvoltage switch-off time x time (s)</i>	Set overvoltage switch-off time



1

2

3

4

5

6

7

8

9

10

Grid settings	Explanation
Undervoltage switch-off time x time (s)	Set undervoltage switch-off time
Max. grid start voltage (V)	If the supply voltage is higher than the upper limit of the reconnection voltage after the inverter has been shut down for protection due to a fault, the inverter may not be reconnected to the grid.
Min. grid start voltage (V)	After the inverter is shut down for protection due to a fault, if the supply voltage is lower than the lower limit of the reconnection voltage, the inverter may not be reconnected to the grid.
Max. grid start frequency (Hz)	After the inverter is shut down for protection due to a fault, if the grid frequency is higher than the upper limit of the reconnection frequency, the inverter may not be reconnected to the grid.
Min. grid start frequency (Hz)	After the inverter is shut down for protection due to a fault, if the grid frequency is lower than the lower limit of the reconnection frequency, the inverter may not be reconnected to the grid.
Moving average	Set 10 minutes of average overvoltage value

Power adaptation/ controls	Explanation
Active power control	Active power control
<i>P(U) regulation</i>	Parameter of the P(U) curve, which reduces the active power if the output voltage exceeds a certain value
<i>P(F) regulation</i>	Parameter of the P(f) curve, which decreases the active power during overfrequency or increases the active power during underfrequency
<i>Power gradient (%/s)</i>	Set the power gradient. The power gradient indicates how quickly the power is to be increased or decreased.
<i>Maximum feed-in capacity (W)</i>	Set the inverter's maximum active power
<i>Maximum active power (%)</i>	Setting for maximum output power of the inverter
Reactive power control	Reactive power control



1

2

3

4

5

6

7

8

9

10

Power adaptation/ controls		Explanation
	Settling time of reactive power	Specifies the reactive power settling time (3 Tao, PT-1 behaviour)
	Reactive power mode	Specifies the reactive power control mode. Configure settings according to the power supply company for reactive power control.
Energy management		Power limitation
	Power limitation function	Deactivated: No energy meter connected to the inverter. KSEM: A KOSTAL Smart Energy Meter is connected to the inverter.
	Sensor position	Installation position of energy meter (grid connection point or consumer) <input checked="" type="checkbox"/> Connecting the KOSTAL Smart Energy Meter, Page 54
	Modbus address of energy meter	Energy meter Modbus address
	Limitation of the active power to (W)	Set up power limitation
	IP address of energy meter	Energy meter IP address
	L1-3 grid power	Displays the grid power at the individual phases
	Total energy	Shows the energy supply from the public grid
	Total feed-in energy	Shows the feed-in into the public grid
	L1-3 consumer power	Shows the consumer power at the individual phases
	Total consumption	Shows the total consumption
	L1-3 inverter output	Shows the inverter output at on the individual phases
	Total inverter output	Shows the total energy generated by the inverter
Ripple control receiver		Ripple control receiver control
	Activate ripple control receiver	Activate/deactivate ripple control receiver function <input checked="" type="checkbox"/> Connecting ripple control receiver, Page 63
	RCR active power (%)	Set active power value for ripple control receiver
	RCR reactive power	Set reactive power value or power factor cos phi for ripple control receiver



1

2

3

4

5

6

7

8

9

10

Other settings	Explanation
Isolated network detection	Activate/deactivate isolated network detection. Ensures that the inverter does not switch on or off in the event of supply voltage errors.
Residual current monitoring	Activate/deactivate residual current monitoring. When the function is enabled, the inverter detects the array fault current.
Compatibility of type A RCD	If this function has been activated, type A RCDs can be used as residual current protection equipment. In such cases, the inverter shuts down when the residual current becomes incompatible with a type A RCD. If the function is deactivated, a type B RCD must be used as residual current protection equipment if an RCD is stipulated.
Shadow management	If PV strings are in partial shading, the PV string affected no longer achieves its optimum performance. If shadow management is activated, the inverter adapts the MPP tracker in such a way that it can operate at maximum possible performance.
Shadow management interval time (s)	Set the interval of the MPP tracker sampling rate
Insulation resistance (kOhm)	If the value established for insulation resistance is less than the preset value, the inverter is not connected to the grid
Leakage current limit (mA)	Limit value for leakage current detection. If the value established is higher than the preset value, the inverter will shut down.
Limit for unbalanced voltage (%)	Set threshold value for supply voltage unbalance
Dynamic grid support (FRT)	Dynamic grid support (FRT = Fault Ride Through)
Positive sequence K factor	Settings for uninterrupted cycling through grid faults FRT (Fault Ride Through)
Negative sequence K factor	
Monitoring of supply voltage	
Undervoltage ride through (V) UVRT	



1

2

3

4

5

6

7

8

9

10

Other settings	Explanation
<i>Overvoltage ride through (V) OVRT</i>	
<i>Grid support mode</i>	
<i>Limited grid support (%)</i>	
<i>Irregular voltage change (%)</i>	
Overvoltage protection monitoring	Activate/deactivate monitoring of the internal overvoltage protection modules (SPD - Surge Protective Device).



6. System monitoring

6.1	The log data.....	113
6.2	Retrieving log data	114
6.3	The KOSTAL Solar Portal.....	116



1

2

3

4

5

6

7

8

9

10

6.1 The log data

The inverter is equipped with a data logger, which regularly records data from the system.

The log data can be used for the following purposes:

- Check operating characteristics of the system
- Determine and analyse errors
- Download and graphically depict yield data



1

2

3

4

5

6

7

8

9

10

6.2 Retrieving log data

There are several options for retrieving and permanently storing the log data:

- **Option 1:** Download and display log data via the KOSTAL PIKO CI app
- **Option 2:** Transfer log data to a solar portal and display it

Option 1: Download and display log data via the KOSTAL PIKO CI app

A range of inverter data can be exported.

- Event messages
 - Generation data
 - Inverter configuration data
1. In the KOSTAL PIKO CI app, go to **Settings > Basic settings > Export event messages**.  **KOSTAL PIKO CI app - menu structure, Page 95**
 2. Confirm the download.
- ✓ The log data can be saved to a computer and displayed and further processed with any common spreadsheet program (e.g. Excel).



Option 2: Transfer log data to the KOSTAL Solar Portal and display it

With a solar portal it is possible to monitor the PV system and performance data via the Internet.

The KOSTAL Solar Portal has the following functions, which, however, may differ depending upon the portal:

- Graphic depiction of performance data
- Worldwide online access to the portal
- Email notification of errors
- Data export (e.g. Excel file)
- Long-term storage of log data

Data transfer to the KOSTAL Solar Portal:



INFO

A correctly set-up network connection/Internet connection is a prerequisite for data transfer.

It may take as long as 20 minutes following activation until the data export is visible on the KOSTAL Solar Portal.

The KOSTAL Solar Portal can be accessed using the following link:

www.kostal-solar-portal.com.

-
- The inverter has an Internet connection.
 - The inverter is registered on the KOSTAL Solar Portal .
 - The activation of data transfer is activated in the inverter by default.



6.3 The KOSTAL Solar Portal

The solar portal of KOSTAL Solar Electric GmbH is a free Internet platform for monitoring the PV system.

The inverter sends the PV system's yield data and event messages to the KOSTAL Solar Portal via the Internet.

The information is stored in the KOSTAL Solar Portal. You can view and call up this information via the Internet.



Conditions for use

- The inverter must have a connection to the Internet.
- The inverter must not yet be registered on the KOSTAL Solar Portal .
- The inverter must not yet be assigned to a plant.

To use the KOSTAL Solar Portal, follow these three steps:

- Data transfer to KOSTAL Solar Portal must be activated in the inverter. With the KOSTAL PIKO CI, this activation is activated by default.
- You must register on the website of KOSTAL Solar Electric GmbH to use the KOSTAL Solar Portal. Registration is free.
- If the KOSTAL PIKO CI is connected to a KOSTAL Smart Energy Meter, the KOSTAL Smart Energy Meter must also be set up in the KOSTAL Solar Portal to display the self-consumption values.



7. Maintenance

7.1	During operation	118
7.2	Maintenance and cleaning	119
7.3	Housing cleaning	120
7.4	Fan	121
7.5	Replacing PV fuses	122
7.6	Updating software.....	123
7.7	Event codes.....	125



7.1 During operation

Once correctly installed, the inverter runs virtually maintenance-free.

For proper operation in a larger solar system, the normal measures of regular system monitoring are fully sufficient.

In particular, tracking the energy obtained via data loggers, the KOSTAL Solar Portal or energy meters will quickly indicate irregularities. Events during operation are also logged.

For plant safety, we would recommend the maintenance work stated in the following sections.



1

2

3

4

5

6

7

8

9

10

7.2 Maintenance and cleaning

The following maintenance tasks are to be carried out for the inverter:



DANGER

Risk of death due to electrical shock and discharge!

Life-threatening voltages are present in the inverter.

- Only a qualified electrician may open and perform work on the device.
- Disconnect all poles of the device before starting work.
- Wait at least 10 minutes after disconnecting the device until the internal capacitors have discharged.

Maintenance list

Activity	Interval
Check operational status <ul style="list-style-type: none"> ■ Normal operating noise ■ Function of all communication connections ■ Damage or housing deformation 	Once a month
Electrical connections <ul style="list-style-type: none"> ■ Check that cable connections and plugs have good contact and are secure ■ Check cable connections for damage or ageing ■ Check grounding 	Once every six months
Clean the inverter <ul style="list-style-type: none"> ■ Remove soiling ■ Check ventilation ducts, clean if necessary ■ Remove and clean the fan if necessary 	Once a year

Use maintenance lists in which the work undertaken is logged.

If no maintenance work is carried out, this will result in an exclusion of warranty (see 'Exclusion of warranty' in our service and warranty conditions).



1

2

3

4

5

6

7

8

9

10

7.3 Housing cleaning

Only clean the housing with a damp cloth.

Do not use any harsh cleaning agents.

Do not use devices that produce a spray or water jet.

In particular, check the condition of the ventilation ducts and the function of the fans.



7.4 Fan

Inverters generate heat during operation, which is dissipated via built-in heat sinks and fans. For this purpose, the ventilation ducts and fans must be kept free of contamination.

If problems occur, check whether the ambient temperature of the inverter exceeds the upper limit. If so, improve ventilation to lower the temperature. If the fan emits abnormal noise, replace the corresponding fans in good time. Please contact your support team for assistance with this.

Vacuuming ventilation ducts

To ensure many years of trouble-free operation, regularly vacuum the ventilation ducts.



POSSIBLE DAMAGE

Risk of damage when blowing out with compressed air.

When blowing out the ventilation ducts with compressed air, fine dust particles may find their way into the bearings of the installed fans and damage them.

- Do not use compressed air, vacuum the inverter's ventilation ducts instead.
-
- Remove detritus consisting of leaves, dust, insects, etc., especially in the vicinity of the ventilation ducts.
 - For example, use an industrial vacuum cleaner and vacuum the ventilation ducts and immediate surroundings.



1

2

3

4

5

6

7

8

9


10

7.5 Replacing PV fuses

The PV fuses in the PIKO CI 50/60 can be replaced. If an event prompting this is displayed, the inverter must be disconnected from the grid on the DC and AC sides.

PIKO CI 50/60 inverter: PV fuses

PIKO CI 50/60

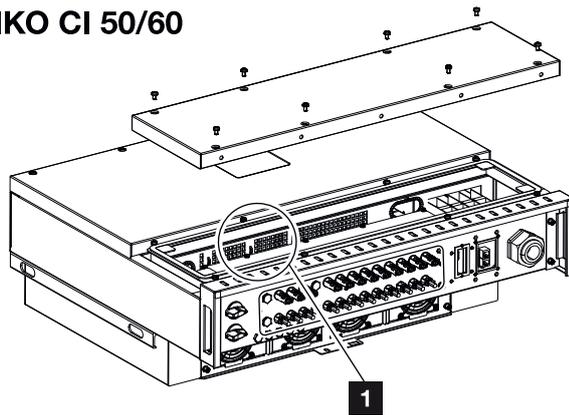

1 PV fuses

1. De-energise inverter on AC and DC sides (**De-energising the inverter, Page 82**).



DANGER

Risk of death due to electrical shock and discharge!

Life-threatening voltages are present in the inverter.

- Only a qualified electrician may open and perform work on the device.
 - Disconnect all poles of the device before starting work.
 - Wait at least 10 minutes after disconnecting the device until the internal capacitors have discharged.
-
2. Wait at least 10 minutes after the inverter has been switched off.
 3. Open the lower section of the inverter.
 4. Use a multimeter to identify and replace defective fuses.
 5. Install cover and screw it tight (3 Nm).
 6. Switch on the inverter again.
- ✓ The PV fuses have been replaced.



1

2

3

4

5

6

7

8

9

10

7.6 Updating software

If the manufacturer has updated software for the inverter, this can be loaded into the inverter. The software is updated to the latest version. If an update is available, you will find this on the manufacturer's website in the download area or you can start the update directly via the KOSTAL PIKO CI app.

Procedure

Use a smartphone or tablet with the KOSTAL PIKO CI app installed. Proceed as follows:

1. Launch the KOSTAL PIKO CI app on the smartphone/tablet that you are using for commissioning.
2. Download the update files from the server by touching the **DOWNLOAD UPDATE FILES** button.
3. Connect to the inverter's WLAN.
4. Make a note of the type and serial number of the inverter on which the update is going to be installed. This information can be found on the type plate.
5. Activate the WiFi/WLAN function on your smartphone/tablet by opening the WiFi/WLAN settings.
6. On your tablet or smartphone, find and select the WLAN network of your inverter. The inverter's SSID is composed of the type and serial number of the inverter. Example: PIKO_CI_50_12345678
7. Enter the inverter's password and confirm your entry.



INFO

The default password is: **12345678**. This should be changed after the initial commissioning.

If you have forgotten the WLAN password, you can reset it to the default value using the reset button under the cover for COM2.

8. Answer yes when asked if you want to remain permanently connected to the network.



INFO

The question does not always appear and depends on the smartphone/tablet's operating system.

9. Switch back to the KOSTAL PIKO CI app and connect the smartphone/tablet and inverter by touching **START** and selecting the inverter.



1

2

3

4

5

6

7

8

9

10

10. The user must be changed to import the update. Go to **Settings > User management > Change User**.
11. Enter the password for the installer and select **Log in as Installer**. If a new password has not yet been assigned, the default password for the installer is **superadmin**.

**INFO**

The default password for the installer is **superadmin**.

With this user, a variety of settings can be configured vis-à-vis the system operator, such as network settings, power limitations or grid guidelines.

This password should be changed after the initial commissioning.

12. Go to **Settings > Basic settings > Update CSB firmware**.
 - The inverter automatically finds the update file (G711-xxxxxxx.bin) and starts the installation.
 13. After the installation, wait approx. 2 minutes before installing the control board update.
 14. Go to **Settings > Basic settings > Update CB firmware**.
 - The inverter automatically finds the update file (m_G9511-xxxxxxx.bin) and starts the installation.
 15. Check the version of the software in the app under **Settings > Basic settings**.
 - Firmware version:**
Shows the safety firmware version, e.g. 3001 for PIKO CI 30 or 600101 for PIKO CI 50/60.
 - Internal code:**
Shows the control board (CB) firmware version, e.g. 010808 = V1.8.8
 - Communication board version:**
Shows the communication board (CSB) firmware version, e.g. 010806 = V1.8.6
- ✓ The update has been installed.



7.7 Event codes

There is no need to take action when an event occurs occasionally or only briefly and the device resumes operation. When an event lasts for long periods or recurs frequently, the cause must be determined and rectified.



DANGER

Risk of death due to electrical shock and discharge!

Life-threatening voltages are present in the inverter.

- Only a qualified electrician may open and perform work on the device.

In case of a permanent event, the inverter interrupts the feed-in and switches off automatically.

- Check whether the DC switch or the external DC voltage separator has been switched off.
- Check whether the event is due to a mains power failure, or whether the fuse between the feed meter and the inverter has tripped.

In case of fuse failure, notify your installer. In the event of a power failure, wait until the grid operator has rectified the fault.

If the event lasts only a short time (grid fault, overheating, overload, etc.), then the inverter will automatically resume operation as soon as the event has been resolved.

If the event persists, notify your installer or the manufacturer's customer support team.



INFO

Contact details can be found in the section [☑ Warranty and service, Page 144](#).

Provide the following information:

- Device type and serial number. You will find this information on the type plate on the exterior of the housing.
- Error description
(LED display and message in the KOSTAL PIKO CI app).

Operational statuses and error causes are reported as a combination of LED display and event code. The event code is shown in the KOSTAL PIKO CI app or in the KOSTAL Solar Portal. Determine the type of event using the table below ([☑ Event messages, Page 126](#)).

If an event occurs repeatedly or permanently, or for events that are not listed in the table, please contact Service.

Event messages

Key for LEDs/display

	LED lights up		Status of PV modules
	LED flashing		Status of grid
	Original status		Status of communication
	LED off		Warning message/alarm

Event codes

Portal event code	Device event code	Meaning	LED			
						
-	-	Status normal				
-	-	Commissioning/start-up				
-	-	WLAN / WiFi / RS485 communication				
-	-	PV normal				
30001	A0	Grid overvoltage				
30002	A1	Grid undervoltage				
30003	A2	Grid missing				
30004	A3	Grid overfrequency				
30005	A4	Grid underfrequency				
30006	B0	PV overvoltage				
30007	B1	PV insulation fault				
30008	B2	Leakage current error				

Portal event code	Device event code	Meaning	LED			
						
30010	C0	Control power low				
30011	B3	PV string error				
30012	B4	PV undervoltage				
30013	B5	Weak PV irradiation				
30014	A6	Grid error				
30017	C2	Grid DC current share too high				
30018	C3	Inverter relay fault				
30020	C5	Inverter overtemperature				
30021	C6	Residual current monitoring fault				
30022	B7	Reverse polarity strings				
30023	C7	System error				
30024	C8	Fan blocked				
30025	C9	DC link unbalance				
30026	CA	Overvoltage of intermediate circuit				
30027	CB	Internal communication error				
30028	CC	Software incompatible				
30029	CD	EEPROM error				
30030	CE	Persistent warning				
30031	CF	Inverter error				

Portal event code	Device event code	Meaning	LED			
						
30032	CG	DC booster error				
30038	CH	Master connection lost				
30039	CJ	Meter connection lost				

If the inverter enters shutdown mode due to an event shown above, the Warning/Alarm LED will light up. The Troubleshooting table ( **Troubleshooting, Page 128**) describes actions to be taken for the most common events.

Troubleshooting

Event code	Causes	Recommended measures
Grid overvoltage Grid undervoltage Grid missing Grid overfrequency Grid underfrequency Grid error	The grid voltage exceeds its permissible range or the grid is not available.	<p>If the alarm occurs occasionally, there may be a fault in the power supply system. No additional measures are required.</p> <p>If the alarm occurs repeatedly, contact your local power company. If the fault is not due to the grid, check the grid settings of the inverter using the KOSTAL PIKO CI app.</p> <p>If the alarm persists for a long time, check whether the AC line circuit breaker / AC terminals are disconnected or the grid power supply has failed.</p>
PV overvoltage	The input voltage of the PV modules exceeds the permissible range of the inverter.	Check the number of PV modules and adjust them if necessary.
PV undervoltage	The input voltage of PV modules is below the preset protection value of the inverter.	<p>When the intensity of the sunlight is low, the voltage of the PV modules drops. No action is required.</p> <p>If the intensity of sunlight is high, check for short circuits, open circuits, etc. in the PV strings.</p>



1

2

3

4

5

6

7

8

9

10

Event code	Causes	Recommended measures
PV insulation fault	There is a short circuit between PV strings and protective earth. PV strings are installed in a persistently humid environment.	If the alarm occurs accidentally, the external circuits (PV strings) will supply irregular values. The inverter automatically returns to normal operation after the fault has been corrected. If the alarm occurs repeatedly or lasts for a long time, check whether the insulation resistance of the PV strings to earth is too low.
Leakage current error	The insulation resistance to earth on the input side decreases during inverter operation, resulting in too high a residual current.	Check the insulation resistance to earth for the PV strings. If a short circuit has occurred, correct the error. If the insulation resistance to earth in a rainy environment is lower than the default value, adjust the insulation resistance in the KOSTAL PIKO CI app.
Weak PV irradiation	PV strings have been covered for a long time. PV strings deteriorate.	Check whether the PV string is covered. If the PV string is clean and not covered, check if the PV modules are ageing or if the performance has deteriorated.
PV string error	The cables of the PV strings were connected the wrong way round during inverter installation.	Check that the PV string cables are correctly connected. If they are connected the wrong way round, connect the cables correctly.
BUS undervoltage	An unusual internal imbalance in relation to the energy control was caused by the PV strings, which triggered a major change in working conditions in the grid.	If the alarm occurs occasionally, the inverter can automatically return to normal operation after the fault has been corrected.
BUS overvoltage		If the alarm occurs repeatedly, contact your support team for technical assistance.
Reverse polarity strings		
DC booster error		
EEPROM error	EEPROM component damaged	Please contact your support team. Replace the monitoring card.



1

2

3

4

5

6

7

8

9

10

Event code	Causes	Recommended measures
Zero power generation and yellow alarm light, which lights up in the remote monitoring system	Communication failure	If a data logger is being used, modern or otherwise, please restart the data logger. If the error still occurs, contact your support team.
Remote monitoring system indicates zero power generation	Communication failure	If a data logger is being used, modern or otherwise, please restart the data logger. If the error still occurs, contact your support team.
Remote monitoring system shows no output voltage	DC switch to OFF	Check if the DC switch is damaged, and if not, turn it ON . If the error still occurs, contact your support team.
Grid error	Fault in the power supply system	Wait until power is restored.
	DC switch to OFF	Turn the DC switch to ON . If the DC switch trips frequently, contact your support.
Master connection lost	Connection between slave and master inverter is interrupted.	Check whether the communication line to the master inverter has been interrupted. If the error still occurs, contact your support team. Check the communication settings in the KOSTAL PIKO CI app.
Meter connection lost	Communication connection to energy meter (KSEM) interrupted	Check whether the communication line between the master inverter and energy meter (KSEM) has been interrupted. If the error still occurs, contact your support team. Check the communication settings in the KOSTAL PIKO CI app.



8. Technical information

8.1	Technical data	132
8.2	Block diagrams	135



1

2

3

4

5

6

7

8

9

10

8.1 Technical data

Subject to technical changes. Errors excepted.

You can find current information at www.kostal-solar-electric.com.

Input side (DC)

PIKO CI	Unit	30	50	60
Max. PV power ($\cos \phi = 1$)	kWp	45	75	90
Nominal DC power	kW	30	50	60
Rated input voltage ($U_{dc,r}$)	V	620		
Start input voltage ($U_{dc,start}$)	V	250		
Input voltage range ($U_{dc,min}$)	V	180	200	
Input voltage range ($U_{dc,max}$)	V	1000	1100	
MPP range at rated output ($U_{mpp,min}$)	V	480	540	
MPP range at rated output ($U_{mpp,max}$)	V	800		
MPP working voltage range ($U_{mpp,work-min}$)	V	180	200	
MPP working voltage range ($U_{mpp,work-max}$)	V	960		
Max. working voltage ($U_{dc,workmax}$)	V	960		
Max. input current ($I_{dc,max}$) per MPPT - from article number: PIKO CI 30: 10534223, PIKO CI 50: 10534084, PIKO CI 60: 10534085	A	DC1-3: 40.5 DC4-6: 40.5	DC1-3: 39 DC4-6: 39 DC7-8: 26 DC9-10: 26	DC1-3: 39 DC4-6: 39 DC7-9: 39 DC9-12: 39
Max. DC current per DC input ($I_{Stringmax}$) - from article number: PIKO CI 30: 10534223, PIKO CI 50: 10534084, PIKO CI 60: 10534085	A	14	18	
Max. input current ($I_{dc,max}$) per MPPT - from article number: PIKO CI 30: 10523267, PIKO CI 50: 10523268, PIKO CI 60: 10523269	A	DC1-3: 37.5 DC4-6: 37.5	DC2-4: 33 DC6-8: 33 DC10-11: 22 DC13-14: 22	DC2-4: 33 DC6-8: 33 DC9-11: 33 DC12-14: 33
Max. DC current per DC input ($I_{Stringmax}$) - from article number: PIKO CI 30: 10523267, PIKO CI 50: 10523268, PIKO CI 60: 10523269	A	14		
Max. DC short-circuit current ($I_{sc,pv}$)				
Number of DC inputs		6	10	12
Number of independent MPP trackers		2	4	

Output side (AC)

PIKO CI	Unit	30	50	60
Rated power, $\cos \phi = 1$ ($P_{ac,r}$)	kW	30	50	60
Output apparent power ($S_{ac,max}$)	kVA	33	55	66
Nominal apparent power ($S_{ac,nom}$)	kVA	30	50	60
Min. output voltage ($U_{ac,min}$)	V	277		



1

2

3

4

5

6

7

8

9

10

PIKO CI	Unit	30	50	60
Max. output voltage (U _{ac,max})	V		520	
Rated current (I _{nom})	A	43.3	72.2	86.6
Max. output current (I _{ac,max})	A	48	83	92
Short-circuit current (peak/RMS)	A	-/48	-/83	-/92
Grid connection		3N~, 230/400 V, 50 Hz		
Rated frequency (f _r)	Hz	50		
Grid frequency (f _{min} - f _{max})	Hz	47/53		
Setting range for the power factor (cos φ _{AC,r})		0.8...1...0.8		
Power factor at rated power (cos φ _{AC,r})		1		
THD	%	<3		

Device properties

PIKO CI	Unit	30	50	60
Standby	W		<1	

Efficiency

PIKO CI	Unit	30	50	60
Max. efficiency	%	98.2	98.3	
European efficiency	%	97.9	98.1	
MPP adjustment efficiency	%	99.9		

System data

PIKO CI	Unit	30	50	60
Topology: Without galvanic isolation – transformerless			Yes	
Protection class in accordance with IEC 60529			IP 65	
Protective class according to EN 62109-1			I	
Overvoltage category according to IEC 60664-1 on input side (PV generator)			II	
Overvoltage category according to IEC 60664-1 on output side (grid connection)			III	
DC/AC overvoltage protection			Type 2	
Degree of contamination			4	
Environmental category (outdoor installation)			Yes	
Environmental category (indoor installation)			Yes	
UV resistance			Yes	
AC cable diameter (min-max)	mm	22...32	35...50	
AC cable cross-section (min-max)	mm ²	10...25	35...50	
PV cable cross-section (min-max)	mm ²	4...6		



1

2

3

4

5

6

7

8

9

10

PIKO CI	Unit	30	50	60
Max. fuse protection on output side (AC) IEC 60898-1	A	B63 / C63	B125 / C125	
Internal operator protection in accordance with EN 62109-2		RCMU/RCCB type B		
Independent disconnection device according to VDE V 0126-1-1		Yes		
Height/width/depth	mm	470/555/270	710/855/285	
Weight	kg	41	83	
Cooling principle – regulated fans		Yes		
Max. air throughput	m ³ /h	185	411	
Noise emission (typical)	dB(A)	50	<63	
Ambient temperature	°C	-25...60		
Max. operating altitude above sea level	m	4000		
Relative humidity	%	0...100		
Connection technology, DC side		Amphenol plug H4		
Connection technology, AC side		M5	M8	

Interfaces

PIKO CI	Unit	30	50	60
Ethernet LAN TCP/IP (RJ45)			2	
Wi-Fi (2.4 GHz [IEEE 802.11 b/g/n])			Yes	
RS485			1	
Digital inputs			4	

Directives / Certification

Directives / Certification	
PIKO CI 30	EN62109-1, EN62109-2, VDE-AR-N 4105:2018, PO12.2, RD 244:2019, UNE 217001, EN 50549-1 -2, CEIO-16 2019, CEIO-21 2019 >11,08kW, UK G99/1-4 LV, IRR-DCC MV 2015, IEC61727/62116
PIKO CI 50	EN62109-1, EN62109-2, VDE-AR-N 4105:2018, PO12.2, RD 244:2019, UNE 217001, EN 50549-1 -2, CEIO-16 2019, CEIO-21 2019 >11,08kW, UK G99/1-4 LV, IRR-DCC MV 2015, IEC61727/62116
PIKO CI 60	EN62109-1, EN62109-2, VDE-AR-N 4105:2018, PO12.2, RD 244:2019, UNE 217001, EN 50549-1 -2, CEIO-16 2019, CEIO-21 2019 >11,08kW, UK G99/1-4 LV, IRR-DCC MV 2015, IEC61727/62116

Measured under rated output at an ambient temperature of 23 °C. In the case of an unfavourable string connection or higher ambient temperature, the noise emission may be higher.



1

2

3

4

5

6

7


8

9

10

8.2 Block diagrams

Block diagram for PIKO CI 30

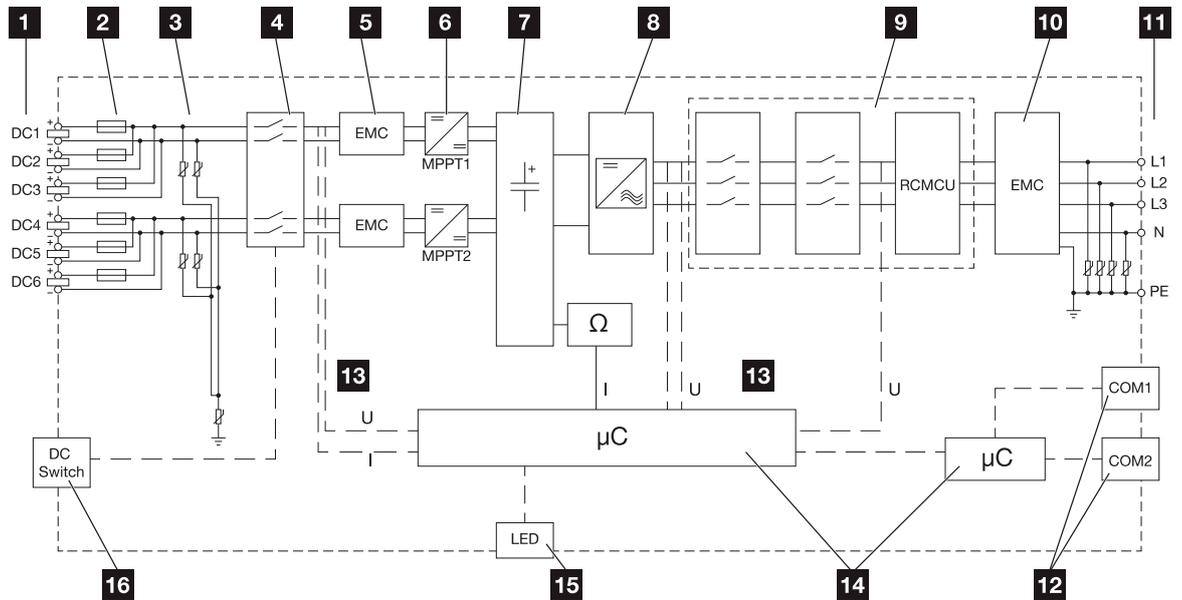

- 1 DC inputs for PV modules
- 2 DC fuses
- 3 Integrated overvoltage protection (DC side)
- 4 Electronic DC disconnection device
- 5 EMC filter (DC side)
- 6 DC regulator
- 7 Intermediate circuit
- 8 Inverter bridge circuit
- 9 Grid monitoring and shutdown
- 10 EMC filter (AC side)
- 11 AC connection
- 12 COM1 and COM2 connection panels for communication interfaces
- 13 Voltage and current measurement
- 14 Control system and communication
- 15 Status LED
- 16 DC switch



1

2

3

4

5

6


7

8

9

10

Block diagram for PIKO CI 50

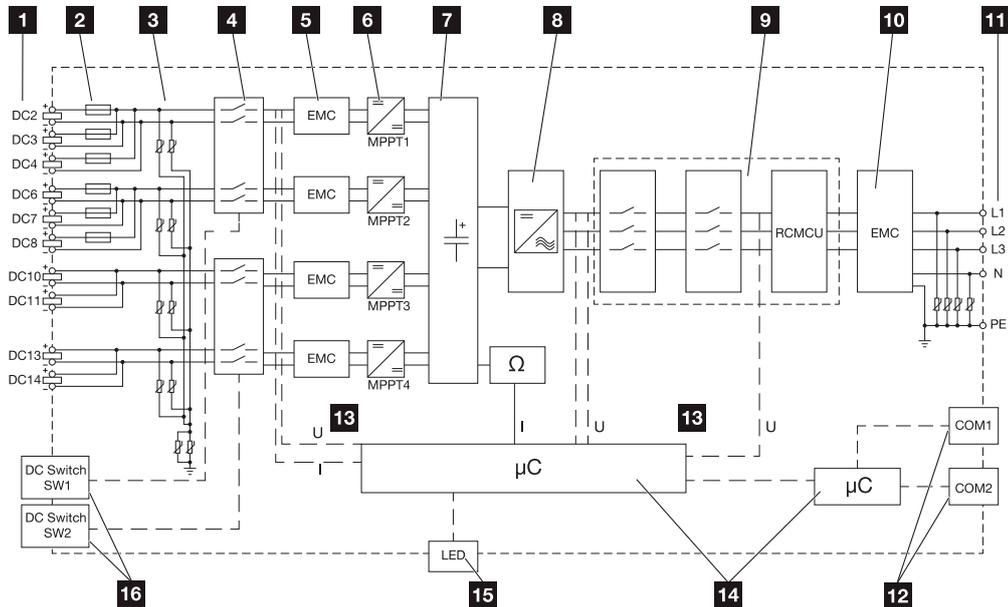

- 1 DC inputs for PV modules
- 2 DC fuses
- 3 Integrated overvoltage protection (DC side)
- 4 Electronic DC disconnection device
- 5 EMC filter (DC side)
- 6 DC regulator
- 7 Intermediate circuit
- 8 Inverter bridge circuit
- 9 Grid monitoring and shutdown
- 10 EMC filter (AC side)
- 11 AC connection
- 12 COM1 and COM2 connection panels for communication interfaces
- 13 Voltage and current measurement
- 14 Control system and communication
- 15 Status LED
- 16 DC switch



1

2

3

4

5

6


7

8

9

10

Block diagram for PIKO CI 60

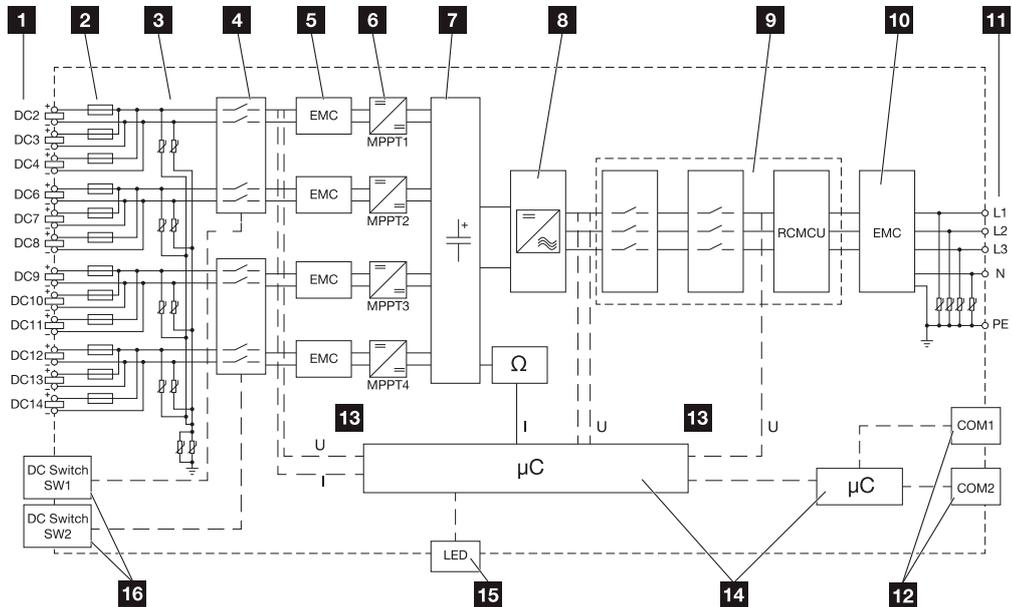

- 1 DC inputs for PV modules
- 2 DC fuses
- 3 Integrated overvoltage protection (DC side)
- 4 Electronic DC disconnection device
- 5 EMC filter (DC side)
- 6 DC regulator
- 7 Intermediate circuit
- 8 Inverter bridge circuit
- 9 Grid monitoring and shutdown
- 10 EMC filter (AC side)
- 11 AC connection
- 12 COM1 and COM2 connection panels for communication interfaces
- 13 Voltage and current measurement
- 14 Control system and communication
- 15 Status LED
- 16 DC switch



1

2

3

4

5

6

7

8

9

10

9. Accessories

9.1	KOSTAL Solar Portal.....	139
9.2	KOSTAL Solar App	140



1

2

3

4

5

6

7

8

9

10

9.1 KOSTAL Solar Portal

The KOSTAL Solar Portal allows operation of the inverters to be monitored via the Internet. This protects your investment in a PV system against yield losses, e.g. through active e-mail alerts if events occur.

Registering for the KOSTAL Solar Portal is free of charge at www.kostal-solar-portal.com.

Functions include:

- Worldwide online access to the portal
- Graphic representation of the power and yield data
- Visualisation of data and thus being made aware of how to optimise self-consumption
- Notification of events by e-mail
- Data export
- Sensor evaluation
- Display and proof of a potential active power reduction by the grid operator
- Storage of log data for long-term and reliable monitoring of your PV system
- Providing system data for the KOSTAL Solar App

Additional information about this product is available on our website

www.kostal-solar-electric.com under **Products > Monitoring software > KOSTAL Solar Portal**.





1

2

3

4

5

6

7

8

9

10

9.2 KOSTAL Solar App

The free KOSTAL Solar App offers you professional monitoring of your photovoltaic system. You can use the KOSTAL Solar App to simply and easily access all functions on your smartphone or tablet at any time.

To set up and use the app, you will need access to the KOSTAL Solar Portal and to have an inverter set up there. To log in to the app, you will need to use the same access data as for the KOSTAL Solar Portal.

You can use the KOSTAL Solar App to easily monitor your photovoltaic system and to display relevant system data both at home and when you are out and about. It allows you to access the consumption and generation data over various time periods, such as day, week, month and year, and to view your photovoltaic system's historical data. This means that with the KOSTAL Solar App you are always up to date.

Download the free KOSTAL Solar App today and benefit from new and advanced functionalities.

Additional information about this product is available on our website

www.kostal-solar-electric.com under **Products > Monitoring software > KOSTAL Solar App**.



KOSTAL Solar App





10. Appendix

10.1	Type plate.....	142
10.2	Warranty and service	144
10.3	Handover to the operator.....	145
10.4	Decommissioning and disposal.....	146



1

2

3

4

5

6

7


8

9

10

10.1 Type plate

The type plate is located on the device. You will find the device type and the most important technical data listed on the type plate.

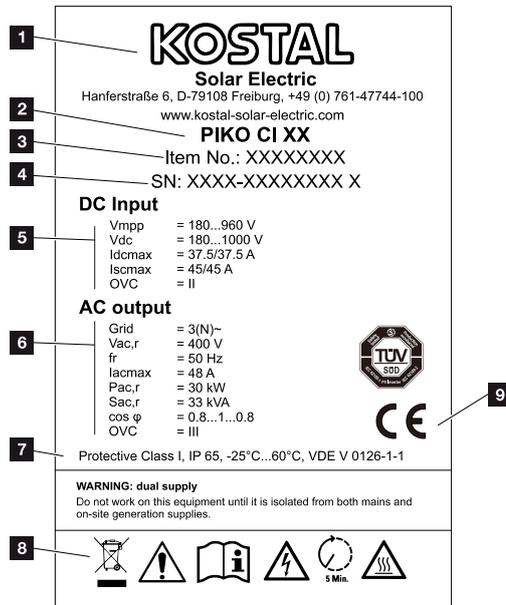

- 1 Name and address of manufacturer
- 2 Device type
- 3 KOSTAL article number
- 4 Serial number
- 5 Information on DC inputs:
 - Input voltage range
 - Max. input voltage
 - Max. input current (PV modules per DC group)
 - Max. short-circuit current (PV modules, per DC group)
 - Overvoltage category



1

2

3

4

5

6

7

8

9

10

- 6 Details of the AC output:
- Number of feed-in phases
 - Output voltage (nominal)
 - Grid frequency
 - Max. output current
 - Max. output power
 - Max. output apparent power
 - Power factor adjustment range
 - Overvoltage category
- 7 Protective class in accordance with IEC 62103, protection class, ambient temperature range, overvoltage category, requirements with which the integrated grid monitoring complies
- 8 Warning symbols
- 9 CE mark



10.2 Warranty and service

Information about the service and warranty conditions can be found in the download area for the product at www.kostal-solar-electric.com.

For service information and in the event of parts being needed, we require your device type and the serial number. You will find this information on the type plate on the exterior of the housing.

If you have any technical questions, please call our service hotline:

- Germany and other countries (language: German, English):
+49 (0)761 477 44-222
- Switzerland:
+41 32 5800 225
- France, Belgium, Luxembourg:
+33 16138 4117
- Greece:
+30 2310 477 555
- Italy:
+39 011 97 82 420
- Poland:
+48 22 153 14 98
- Spain, Portugal (language: Spanish, English):
+34 961 824 927

Spare parts

If spare parts or accessories are required for troubleshooting, use only original spare parts and accessories manufactured and/or approved by the manufacturer.



10.3 Handover to the operator

Following successful installation and commissioning, all documents are to be handed over to the operator.

Instruct the operator in how to use the PV system and the inverter.

The operator must be made aware of the following points:

- Position and function of the DC switch
- Position and function of the AC line circuit breaker
- Procedure for disconnecting the device
- Safety when handling the device
- Appropriate procedure when checking and servicing the unit
- Meaning of the LEDs and the display messages
- Contact person in the event of a fault
- The provision of system and inspection documentation in accordance with DIN EN 62446 (VDE 0126-23) (optional).

As the **installer and commissioning engineer**, have the operator confirm the proper handover with their signature.

As the **operator**, have the installer and commissioning engineer confirm that the installation of the inverter and the PV system is safe and complies with standards with their signature.



10.4 Decommissioning and disposal

To dismantle the inverter, proceed as follows:

1. De-energise inverter on AC and DC sides ( **De-energising the inverter, Page 82**).



DANGER

Risk of death due to electrical shock and discharge!

De-energise device and secure against being switched on again.  **De-energising the inverter, Page 82**

2. PIKO CI 50/60: Open the lower cover of the inverter.
3. Loosen terminals and cable glands.
4. Remove all DC cables, AC cables and communication cables.
5. PIKO CI 50/60: Close the inverter cover.
6. Loosen locking screw on inverter's bracket.
7. Lift inverter off the wall.

Proper disposal

Electronic equipment labelled with a dustbin with a line through it may not be disposed of with household waste. This equipment can be handed in to waste collection points free of charge.



Find out about the local requirements for the separate collection of electrical and electronic equipment in your country.

